


xDot®

AT Command Reference Guide

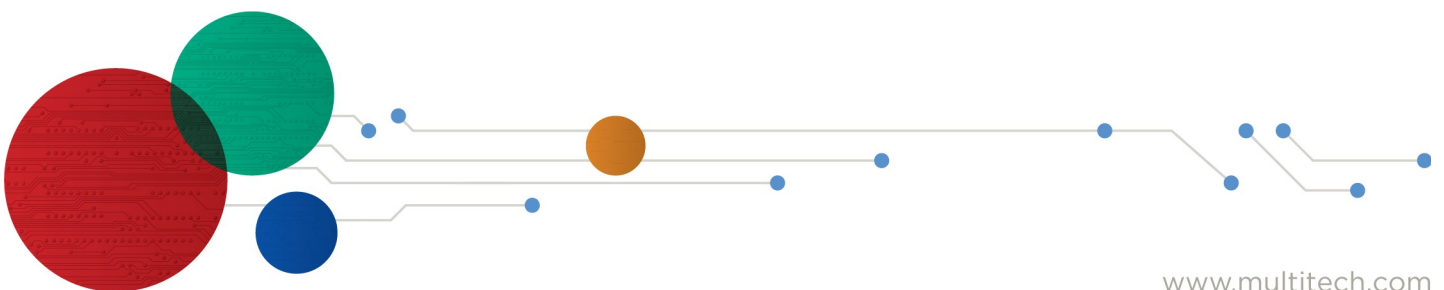

xDot® AT Command Guide

Models: MTXDOT-xxx

Part Number: S000768, Version 4.3

Copyright

This publication may not be reproduced, in whole or in part, without the specific and express prior written permission signed by an executive officer of Multi-Tech Systems, Inc. All rights reserved. **Copyright © 2023 by Multi-Tech Systems, Inc.**

Multi-Tech Systems, Inc. makes no representations or warranties, whether express, implied or by estoppels, with respect to the content, information, material and recommendations herein and specifically disclaims any implied warranties of merchantability, fitness for any particular purpose and non-infringement.

Multi-Tech Systems, Inc. reserves the right to revise this publication and to make changes from time to time in the content hereof without obligation of Multi-Tech Systems, Inc. to notify any person or organization of such revisions or changes.

Trademarks and Registered Trademarks

MultiTech, and the MultiTech logo, and MultiConnect are registered trademarks and mDot, xDot, and Conduit are a trademark of Multi-Tech Systems, Inc. All other products and technologies are the trademarks or registered trademarks of their respective holders.

Legal Notices

The MultiTech products are not designed, manufactured or intended for use, and should not be used, or sold or re-sold for use, in connection with applications requiring fail-safe performance or in applications where the failure of the products would reasonably be expected to result in personal injury or death, significant property damage, or serious physical or environmental damage. Examples of such use include life support machines or other life preserving medical devices or systems, air traffic control or aircraft navigation or communications systems, control equipment for nuclear facilities, or missile, nuclear, biological or chemical weapons or other military applications (“Restricted Applications”). Use of the products in such Restricted Applications is at the user’s sole risk and liability.

MULTITECH DOES NOT WARRANT THAT THE TRANSMISSION OF DATA BY A PRODUCT OVER A CELLULAR COMMUNICATIONS NETWORK WILL BE UNINTERRUPTED, TIMELY, SECURE OR ERROR FREE, NOR DOES MULTITECH WARRANT ANY CONNECTION OR ACCESSIBILITY TO ANY CELLULAR COMMUNICATIONS NETWORK. MULTITECH WILL HAVE NO LIABILITY FOR ANY LOSSES, DAMAGES, OBLIGATIONS, PENALTIES, DEFICIENCIES, LIABILITIES, COSTS OR EXPENSES (INCLUDING WITHOUT LIMITATION REASONABLE ATTORNEYS FEES) RELATED TO TEMPORARY INABILITY TO ACCESS A CELLULAR COMMUNICATIONS NETWORK USING THE PRODUCTS.

The MultiTech products and the final application of the MultiTech products should be thoroughly tested to ensure the functionality of the MultiTech products as used in the final application. The designer, manufacturer and reseller has the sole responsibility of ensuring that any end user product into which the MultiTech product is integrated operates as intended and meets its requirements or the requirements of its direct or indirect customers. MultiTech has no responsibility whatsoever for the integration, configuration, testing, validation, verification, installation, upgrade, support or maintenance of such end user product, or for any liabilities, damages, costs or expenses associated therewith, except to the extent agreed upon in a signed written document. To the extent MultiTech provides any comments or suggested changes related to the application of its products, such comments or suggested changes is performed only as a courtesy and without any representation or warranty whatsoever.

Contacting MultiTech

Sales	Support
sales@multitech.com	support@multitech.com
+1 (763) 785-3500	+1 (763) 717-5863

Website

<https://www.multitech.com>

Knowledge Base

For immediate access to support information and resolutions for MultiTech products, visit <https://www.multitech.com/kb.go>.

Support Portal

To create an account and submit a support case directly to our technical support team, visit: <https://support.multitech.com>.

Warranty

To read the warranty statement for your product, visit <https://www.multitech.com/legal/warranty>.

World Headquarters

Multi-Tech Systems, Inc.
 2205 Woodale Drive, Mounds View, MN 55112
 USA

Contents

Chapter 1 – Introduction	7
AT Commands.....	7
Using Commands	7
Querying	7
Assigning New Values	7
Terminology	8
Chapter 2 – General AT Commands.....	9
AT Attention.....	9
Syntax.....	9
Command with Response Examples.....	9
ATI Request ID.....	9
Syntax.....	9
Command with Response Examples.....	9
ATZ Reset CPU.....	9
Syntax.....	10
Command with Response Examples.....	10
ATE0/1 Echo Mode.....	10
Syntax.....	10
Command with Response Examples.....	10
ATV0/1 Verbose Mode	10
Syntax.....	11
Command with Response Examples.....	11
AT&K0/3 Hardware Flow Control.....	11
Syntax.....	11
Command with Response Examples.....	11
AT&F Reset to Factory Defaults	12
Syntax.....	12
Command with Response Examples.....	12
Example US 915MHz.....	12
Example EU 868MHz.....	12
AT+LW LoRaWAN Version.....	12
Syntax.....	12
Command with Response Examples.....	13
AT+FOTA Firmware over the Air.....	13
Syntax.....	13
Command with Response Examples.....	13
FOTA Passthrough.....	14
AT&W Save Configuration.....	14
Syntax.....	14
Command with Response Examples.....	14
AT+IPR Serial Speed	14
Syntax.....	15
Command with Response Examples.....	15
AT+DIPR Debug Serial Speed.....	15
Syntax.....	15
Command with Response Examples.....	16
AT+LOG Debug Log Level.....	16
Syntax.....	16

Command with Response Examples.....	17
AT+PP Ping Slot Periodicity.....	17
Syntax.....	17
Command with Response Examples.....	17
AT+RTC Real Time Clock.....	18
Syntax.....	18
Command with Response Examples.....	18
AT+GPSTIME GPS Time.....	18
Syntax.....	18
Command with Response Examples.....	18
AT+BLS Beacon Lock Status.....	19
Syntax.....	19
Command with Response Examples (for setup of a Class B device).....	19
AT+BAT Battery Level.....	20
Syntax.....	20
Command with Response Examples.....	20
AT+MEM Available RAM.....	20
Syntax.....	20
Command with Response Examples.....	21
AT+ERASE Erase Flash Storage.....	21
Syntax.....	21
Command with Response Examples.....	21
Chapter 3 – Network Management.....	22
Configuring.....	22
AT+DI Device ID.....	22
AT+CDI Custom Device ID.....	22
AT+CSN Custom Serial Number.....	23
AT+DFREQ Default Frequency Band.....	23
AT+FREQ Frequency Band.....	24
AT+FSB Frequency Sub-Band (915MHz models only).....	25
AT+SW RF Sweep.....	26
AT+PN Public Network Mode.....	27
AT+JBO Join Byte Order.....	29
AT+NJM Network Join Mode.....	29
AT+JOIN Join Network.....	30
AT+JR Join Retries.....	31
AT+JD Join Delay.....	31
Over-the-Air Activation (OTA).....	32
AT+NI Network ID.....	32
AT+NK Network Key.....	33
Manual Activation.....	35
AT+NA Network Address.....	35
AT+NSK Network Session Key.....	35
AT+DSK Data Session Key.....	36
AT+ULC Uplink Counter.....	37
AT+DLC Downlink Counter.....	37
AT+GK Generic App Key.....	38
AT+DWT Transmit Dwell Time.....	39
AT+DS Default Session.....	39
Network Joining.....	40
OTA Network Join.....	40
Auto OTA Network Join.....	40

Ensuring Network Connectivity	40
AT+NJS Network Join Status	40
AT+JN Join Nonces	41
AT+JNV Enable Join Nonce Validation	41
AT+PING Send Ping	42
AT+ACK Require Acknowledgment	42
AT+NLC Network Link Check	43
AT+LCC Link Check Count	44
AT+LCT Link Check Threshold	44
AT+BTO Class B Timeout	45
AT+CTO Class C Timeout	45
Preserving, Saving, and Restoring Sessions	45
AT+SS Save Network Session	45
AT+RS Restore Network Session	46
AT+PS Preserve Session	46
AT&WP Save Protected Settings	47
Chapter 4 – Sending and Receiving Packets	48
Channels and Duty Cycles	48
AT+CHM Channel Mask	48
AT+TXCH Transmit Channel	49
AT+LBT Listen Before Talk	51
AT+TXN Transmit Next	52
AT+TOA Time On Air	53
AT+FO Frequency Offset	53
AT+DUTY Duty Cycle	54
Configuring	55
AT+MAC Inject MAC Command	55
AT+DC Device Class	57
AT+URC Unsolicited Response Code	58
AT+AP Application Port	58
AT+TXP Transmit Power	59
AT+RXD Receive Delay	59
AT+CRC Cyclical Redundancy Check	60
AT+ADR Adaptive Data Rate	60
AT+TXDR TX Data Rate	62
AT+SDR Session Data Rate	63
AT+REP Repeat Packet	64
Sending Packets	64
AT+SEND Send	64
AT+SENDB Send Binary	66
Receiving Packets	66
AT+RECV Receive Once	66
AT+RXO Receive Output	67
AT+DP Data Pending	68
AT+TXW Transmit Wait	68
AT+MCRX Multicast Rx parameters	69
Statistics	70
AT+RSSI Signal Strength	70
AT+LBTRSSI Listen Before Talk Signal Strength	70
AT+SNR Signal to Noise Ratio	71
AT+TXS Available Payload	71
Serial Data Mode	72

AT+SD	Serial Data Mode	72
AT+SMODE	Startup Mode	72
AT+SDCE	Serial Data Clear on Error	73
Chapter 5 – Power Management		74
AT+SLEEP	Sleep Mode	74
	Syntax	74
	Command with Response Examples	74
AT+WP	Wake Pin	75
	Syntax	75
	Command with Response Examples	76
AT+WM	Wake Mode	76
	Syntax	76
	Command with Response Examples	76
AT+WI	Wake Interval	76
	Syntax	76
	Command with Response Examples	77
AT+WD	Wake Delay	77
	Syntax	77
	Command with Response Examples	77
AT+WTO	Wake Timeout	77
	Syntax	78
	Command with Response Examples	78
AT+ANT	Antenna Gain	78
	Syntax	78
	Command with Response Examples	78
Chapter 6 – Testing and Compliance		79
AT+RXDR	Receive Data Rate	79
	Syntax	79
	Command with Response Examples	79
	EU 868MHz	79
AT+RXF	Receive Frequency	79
	Deprecated	79
	Syntax	79
	Command with Response Examples	80
AT+RECV	Receive Continuously	80
	Deprecated	80
	Syntax	80
	Command with Response Examples	80
AT+SENDC	Send Continuous Wave	80
	Syntax	80
	Command with Response Examples	81
AT+SENDI	Send on Interval	81
	Syntax	81
	Command with Response Examples	81
AT+TXF	Transmit Frequency	81
	Syntax	81
	Command with Response Examples	82
Chapter 7 – Examples		83
	Network Configuration and Joining	83
	US 915MHz - Frequency Sub-band	83
	Join Mode	83
	Ensuring Network Connectivity	84

Serial Mode.....	85
Peer to Peer.....	86
Configuration	86

Chapter 1 – Introduction

AT Commands

This reference provides AT Command information for the MultiTech Dot Series. These commands are available in firmware Version 4.0.x and higher. Note that some commands are not available in older firmware versions.

- For xDot-ES firmware, go to <http://www.multitech.net/developer/downloads/#xdot-es>
- For xDot-AD firmware, go to <http://www.multitech.net/developer/downloads/#xdot-ad>
- For mDot firmware upgrade instructions and to download the latest firmware, go to <http://www.multitech.net/developer/software/mdot-software/mdot-firmware-upgrade/>.
- For xDot firmware upgrade instructions and to download the latest firmware, go to <http://www.multitech.net/developer/downloads/#xdot>

Attention: Global xDot models, with WW in the model name, do not have a default frequency band. You must set the frequency band/channel plan for your country/region to use the device. Refer to AT+DFREQ for more information.

Using Commands

Querying

Some commands allow you to query the current value. Enter the command with no argument or followed by a question mark (?):

- Query a value

```
AT+TXP
11
```

```
OK
```

- Query a value with optional ?

```
AT+TXP?
11
```

```
OK
```

Assigning New Values

Some commands allow you to assign a new value:

To assign a new value, pass the value as an argument

```
AT+TXP=10
```

```
OK
```

Terminology

Term	Description
End device	Mote (sensor node)
EUI	Extended Unique Identifier (EUI), a 64-bit global identifier
Gateway	Concentrator or base station
Uplink	In the direction from end device to network server
Downlink	In the direction from network server to end device
ISM	Industrial, scientific and medical radio bands
Frequencies	US: 902-928MHz ISM band (915MHz)
	EU: 863-870MHz ISM band (868MHz)
Channel frequencies	Physical layer
	EU 868MHz
	868,100,000Hz
	868,300,000Hz
	868,500,000Hz
Data rates	300bps to 50Kbps
OTA	Over the air

LoRa Topology

A LoRa network is usually a star or star of stars topology where gateways relay messages between end devices and a central network server. Gateways, like MultiTech's Conduit, may contain the network server. However, the Conduit can be configured to work with an external network server. Gateways communicate with a network server over standard IP connections.

Chapter 2 – General AT Commands

AT Attention

Attention, used to verify the COM channel is working. AT required at the beginning of every command.

Syntax

Command
AT

Parameters and Values

None

Command with Response Examples

AT

OK

ATI Request ID

Request ID returns product and software identification information.

Syntax

Command
ATI

Parameters and Values

None

Command with Response Examples

ATI

```
MultiTech xDot-ES
Firmware   : 4.2.3-4-g439be61-mbed61700
Library    : 4.2.3-1-gc373ed0-mbed61700
MTS-Lora   : 4.2.3-1-g25a039c-mbed61700
LoRaWAN    : 1.0.4
RegParams  : 1.0.3
```

ATZ Reset CPU

Resets the CPU, the same way as pressing the reset button. The program is reloaded from flash and begins execution at the main function. Reset takes about 3 seconds.

Syntax

Command
ATZ

Parameters and values

None

Command with Response Examples

ATZ

OK

ATE0/1 Echo Mode

Enable or disable command mode echo.

Syntax

Command
ATE=<parameter1>

Parameters and Values

Parameter1

0 Disables echo

1 Enables echo (Default)

Command with Response Examples

ATE0

OK

ATE1

OK

ATV0/1 Verbose Mode

Enable or disable verbose mode. Affects the verbosity of command query responses. For example, without verbose mode, AT+IPR? responds with 115200. With verbose mode AT+IPR? responds with Serial Baud Rate: 115200. Does not affect OK responses. Currently none of the xDots support ATV0. Both modes are supported on mDot models.

Syntax

Command

```
ATV=<parameter1>
```

Parameters and Values

Parameter1

- 0 Disables verbose mode (Default)
- 1 Enables verbose mode

Command with Response Examples

```
ATV0
```

```
OK
```

```
ATV1
```

```
OK
```

AT&K0/3 Hardware Flow Control

Enable or disable hardware flow control. Hardware flow control is useful in serial data mode to keep from overflowing the input buffers.

This uses pins CTS and RTS. When in serial data mode, use hardware flow control to prevent buffer overflow. (Serial data mode is AT+SMODE=1 or AT+SD.) Changes CTS signal to low with &K0 and to high with &K3.

Note: RTS of the dot pinout is an output. When used as a DCE device, connect this RTS pin to the CTS of a connected DTE device. The dot RTS pin is an input and connects to CTS of a DTE interface.

Syntax

Command

```
AT&K=<parameter1>
```

Parameters and Values

Parameter1

- 0 Disables hardware flow control
- 3 Enables hardware flow control

Command with Response Examples

```
AT&K0
```

```
OK
```

```
AT&K3
```

```
OK
```

```
AT&K?
```

```
3
```

```
OK
```

AT&F Reset to Factory Defaults

Changes the current settings to the factory defaults, but does not store them. To store the default settings, use with AT&W. Otherwise, resetting or power cycling the device restores the previous settings.

Syntax

Command
AT&F

Parameters and Values

None

Command with Response Examples

```
AT&F
```

```
OK
```

Example US 915MHz

```
AT&F
```

```
OK
```

Example EU 868MHz

```
AT&F
```

```
OK
```

AT+LW LoRaWAN Version

Shows support LoRaWAN MAC version.

Syntax

Command
AT+LW

Parameters and Values

None

Command with Response Examples

```
AT+LW
```

```
1.0.4
```

```
OK
```

AT+FOTA Firmware over the Air

With FOTA enabled, the Conduit initiates the FOTA session. The Dot device responds to downlink messages automatically as needed. When the FOTA session is complete, the Dot device updates if the firmware successfully transferred, or deletes the FOTA session if the firmware transfer failed.

Note: xDot and xDot Essentials require an external flash component in order for FOTA to work. xDot Advanced includes flash. xDot essentials only supports FOTA pass through. It will not detect and use an attached flash memory like the legacy xDot

When you deploy Release 4.0 or newer on an xDot, FOTA is enabled by default.

Use this command to query the FOTA state and enable/disable/reset FOTA.

In Release 4.2.0 or newer, FOTA settings are saved to flash during configuration.

Note: The AT+FOTA feature handles MULTICAST and FOTA operations. When disabled, over-the-air multicast session setup is also disabled.

Syntax

Command
AT+FOTA=<parameter1>
AT+FOTA?

Parameters and Values

Parameter1

- 0 Disable FOTA
- 1 Enable FOTA (Default)
- 2 Reset FOTA
- 3 Multicast session information.

Command with Response Examples

```
AT+FOTA=1
```

```
OK
```

```
AT+FOTA=3
```

```
0 (0 seconds until session or multicast session in progress)
```

```
OK
```

```
AT+FOTA=3
```

```
-1 (No multicast session scheduled or in progress)
```

```
OK
```

```
AT+FOTA=3
```

```
23521 (23521 seconds until multicast session)
```

```
OK
```

FOTA Passthrough

Pass FOTA messages through to the host MCU by enabling Unsolicited Result Code (URC) and select the Rx Output for 2:RAW or 3:HEX data on the serial port. This will send the full FOTA message over serial to the host MCU for processing.

For more on FOUTA and Dots, refer to <https://multitechsystems.github.io/fragmentation>

```
AT+RXO=2 or 3
```

```
AT+URC=1
```

AT&W Save Configuration

Writes configuration settings to flash memory.

Syntax

Command
AT&W

Parameters and Values

None

Command with Response Examples

```
AT&W
```

```
OK
```

AT+IPR Serial Speed

Sets serial baud rate for the AT command port . Changes to this setting take effect after a save and reboot of the Dot.

Syntax

Command
AT+IPR=<parameter1>
AT+IPR?

Parameters and Values

Parameter1

1200
 2400
 4800
 9600
 19200
 38400
 57600
 115200 (Default)
 230500
 460800
 921600

Command with Response Examples

```
AT+IPR
115200
```

OK

```
AT+IPR?
115200
```

OK

AT+DIPR Debug Serial Speed

Sets debug serial port baud rate. Changes to this setting take effect after a save and reboot of the Dot. Power-cycle or reset.

Syntax

Command
AT+DIPR=<parameter1>
AT+DIPR?

Parameters and Values

Parameter1

2400
 4800
 9600
 19200
 38400
 57600
 115200 (Default)
 230500
 460800
 921600

Command with Response Examples

```
AT+DIPR
115200
```

OK

```
AT+DIPR?
115200
```

OK

AT+LOG Debug Log Level

Sets the debug message logging level. Messages are output on the debug port. Higher settings log more messages.

Syntax

Command

```
AT+LOG=<parameter1>
```

Command

```
AT+LOG?
```

Parameters and Values

Parameter1

0 Off – No debug messages (Default)
 1 FATAL – Output FATAL debug messages.
 2 ERROR – Outputs ERROR and FATAL debug messages
 3 WARNING – Outputs WARNING and all lower level debug messages
 4 INFO – Outputs INFO and all lower level debug messages

- 5 DEBUG – Output DEBUG and all lower level debug messages
- 6 TRACE – Output TRACE and all lower level debug messages

Command with Response Examples

```
AT+LOG=0
```

```
OK
```

```
AT+LOG?
```

```
0
```

```
OK
```

AT+PP Ping Slot Periodicity

Set the Class B ping slot periodicity as number of pings per interval up to 128 seconds, 2^7 – periodicity).

Syntax

Command
AT+PP=<parameter1>
AT+PP?

Parameters and Values

Parameter1

Value	How often the end device opens a ping slot during the beacon window interval.
0	Approximately every second.
1	Every 2 seconds.
2	Every 4 seconds.
3	Every 8 seconds.
4	Every 16 seconds.
5	Every 32 seconds.
6	Every 64 seconds.
7	Every 128 seconds, which is the maximum ping period supported by the LoRaWAN Class B specification.

Command with Response Examples

```
AT+PP=7
```

```
OK
```

AT+RTC Real Time Clock

Used to get or set the Unix epoch time in seconds. The RTC clock in the end device to automatically updates the time from the set point except during sleep if wake from interrupt is used. The value is set in the following ways:

1. Directly by issuing AT+RTC=<parameter1>
2. Following a successful join, a MAC command requesting time will be attempted in the first uplink. If successful, the real time clock will be updated.
3. Issuing the command AT+GPSTIME with a successful result.

New command for xDot essentials & advanced.

Syntax

Command
AT+RTC=<parameter1>
AT+RTC?

Parameters and Values

Parameter1

Seconds since epoch (0-4294967295)

Command with Response Examples

```
AT+RTC
1705079467
```

OK

AT+GPSTIME GPS Time

Use this to retrieve GPS time in milliseconds. For this command to succeed, the end device must be joined to the network. If joined, this command will cause an uplink to be sent with a MAC command requesting time from the network server.

Syntax

Command
AT+GPSTIME
AT+GPSTIME?

Parameters and Values

None

Command with Response Examples

```
AT+GPSTIME
1389111849577
```

OK

AT+GPSTIME
Network Not Joined

ERROR

AT+GPSTIME
Failed to send DeviceTimeReq MAC command

ERROR

AT+GPSTIME
Server time not received

ERROR

AT+BLS Beacon Lock Status

Indicates if the beacon is locked or unlocked. A Class B end-device will start as Class A and attempt to acquire a Beacon signal from the network before opening synchronized Rx windows. Once AT+BLS returns 1 to note that a beacon has been locked, the end-device must send an uplink to notify the network that it is ready to receive downlinks in the Class B windows.

- 0 – Not locked
- 1 – Locked

Syntax

Command
AT+BLS

Parameters and Values

None

Command with Response Examples (for setup of a Class B device)

AT+DC
A

OK
AT+DC=B

OK

AT+BLS
0

OK

OK

```
AT+BLS
```

```
1
```

```
OK
```

```
AT+DC
```

```
B
```

```
OK
```

```
AT+SEND
```

```
OK
```

```
<<< Packets can not be received in Class B windows >>>
```

AT+BAT Battery Level

Sets battery level descriptor. This value is sent in an uplink as part of the DevStatusAns mac command response to a DevStatusReq from the LoraWAN network server.

Syntax

Command
AT+BAT
AT+BAT?

Parameters and Values

Parameter1

0 – 255 Maximum is 255

Command with Response Examples

```
AT+BAT
```

```
255
```

```
OK
```

```
AT+BAT=123
```

```
OK
```

```
AT+BAT
```

```
123
```

```
OK
```

AT+MEM Available RAM

Shows available RAM.

Syntax

Command

AT+MEM

Parameters and Values

None

Command with Response Examples

```
AT+MEM
114704 bytes
```

OK

AT+ERASE Erase Flash Storage

Erase some areas of storage (in most cases, related to flash storage). This feature is not supported on xDot essential.

Option available to erase the area of external flash used for FOTA (if present) **OR** configuration in EEPROM.

Syntax

Command
AT+ERASE=<parameter1>
AT+ERASE?

Parameters and Values

Parameter1

- 1 Erase the area of external flash used for FOTA if present
- 2 Erase the configuration on the EEPROM

Command with Response Examples

```
AT+ERASE=1
```

OK

```
AT+ERASE=2
```

OK

Chapter 3 – Network Management

Configuring

AT+DI Device ID

The device ID is an EUI. The EUI is programmed at the factory. This command allows you to query and change the device EUI.

NOTE: A value of all 0's or all F's is not valid. Join requests with these device EUIs are likely to be ignored.

Syntax

Command
AT+DI
AT+DI=<parameter 1>

Parameters and Values

Parameter 1 Device EUI-64, hex: 8

Command with Response Examples

```
AT+DI
00-80-00-00-00-00-00-06
```

OK

```
AT+DI=00-80-00-00-00-01-58-35
00-80-00-00-00-01-58-35
Change the Device EUI
```

OK

AT+CDI Custom Device ID

This command allows you to create a custom device ID. User defined format up to 16 characters to be programmed into the saved configuration for tracking purposes. An example use would be a custom SKU. New command for xDot essentials & advanced.

Syntax

Command
AT+CDI=<parameter 1>

Parameters and Values

Parameter 1 16 characters.

Command Example

```
AT+CDI=12345678
```

AT&W

OK

AT+CSN Custom Serial Number

This command allows you to create a custom serial number. New command for xDot essentials & advanced.

Syntax

Command
AT+CSN=<parameter 1>

Parameters and Values

Parameter 1	16 characters
-------------	---------------

Command Example

```
AT+CSN=12345678
```

```
AT&W
```

OK

AT+DFREQ Default Frequency Band

Use to query or set the protected factory default frequency band/channel plan. Selections include: NONE, US915, AU915, EU868, AS923, AS923-2, AS923-3, AS923-4, KR920, AS923-JAPAN, IN865, or RU864.

Attention: Global xDot models, with WW in the model name, do not have a default frequency band. You must set the frequency band/channel plan for your country/region to use the device.

Syntax

Command
AT+DFREQ?
AT+DFREQ=<parameter 1>

Parameters and Values

Parameter 1	(NONE, US915, AU915, EU868, AS923, AS923-2, AS923-3, AS923-4, KR920, AS923-JAPAN, IN865, RU864)
-------------	---

Command with Response Examples

```
AT+DFREQ?
```

```
US915
```

OK

```
AT+DFREQ=EU868
```

OK

```
AT+DFREQ?
```

EU868

OK

Example for Global xDots

Setting the frequency band/channel plan for global, save as protected settings, and then reset the CPU. To read the active plan, use AT+FREQ.

Example Set to EU868 Channel Plan

```
AT+DFREQ=EU868
```

```
AT&WP
```

```
ATZ
```

```
AT+FREQ  
EU868
```

Example Set to AS923-4 Channel Plan

```
AT+DFREQ=AS923-4
```

```
AT&WP
```

```
ATZ
```

AT+FREQ Frequency Band

Use to query the current frequency band. This is not configurable. It depends on the channel plan.

Syntax

Command
AT+FREQ
AT+FREQ?

Parameters and Values

None

Command with Response Examples

```
AT+FREQ  
US915
```

```
OK
```

```
AT+FREQ  
KR920
```

```
OK
```



```
AT+FREQ?
US915
```

OK

AT+FSB Frequency Sub-Band (915MHz models only)

Configures the frequency sub-band for 915MHz models. This enables hybrid mode for private network channel management.

Note: AT+TXCH lists channels used in the current AT+FSB setting.

Channel Details (AT+PN=0)

AT+FSB	Uplink Channels	Downlink on Rx1 and Rx2
1	902.3-903.7 - 125k, 903.0 500k	923.3 kHz

AT+FSB	Uplink Channels	Downlink on Rx1 and Rx2
2	903.9-905.3 - 125k, 904.6 500k	923.9 kHz
3	905.5-906.9 - 125k, 906.2 500k	924.5 kHz
4	907.1-908.5 - 125k, 907.8 500k	925.1 kHz
5	908.7-910.1 - 125k, 909.4 500k	925.7 kHz
6	910.3-911.7 - 125k, 911.0 500k	926.3 kHz
7	911.9-913.3 - 125k, 912.6 500k	926.9 kHz
8	913.5-914.9 - 125k, 914.2 500k	927.5

Note: Rx1 and Rx2 Downlink on 923.3 – 927.5 depending on uplink channel used (channel / 8)

Channel Details (AT+PN=1 or 2)

AT+FSB	Uplink Channels	Downlink channels on Rx1
1	902.3-903.7 - 125k	923.3-927.5 – 500kHz
2	903.9-905.3 - 125k	
3	905.5-906.9 - 125k	
4	907.1-908.5 - 125k	
5	908.7-910.1 - 125k	
6	910.3-911.7 - 125k	
7	911.9-913.3 - 125k	
8	913.5-914.9 - 125k	

Note: Rx1 Downlink on 923.3 - 927.5 depending on uplink channel used (channel % 8) Rx2 Downlink on 923.3

Syntax

Command
AT+FSB=<parameter1>
AT+FSB?

Parameters and Values

Parameter1

- 0 Allows channel hopping of all 64 channels. (Default)
- 1 Enter a value from 1-8 to configure the end device to use one set of eight channels out of 64 possible. This must match the gateway settings.

Command with Response Examples

AT+FSB
0

OK

AT+FSB?
0

OK

AT+SW RF Sweep

Use RF sweep to send un-modulated data from a minimum to a maximum frequency. The command initiates one sweep over the range of frequencies. Repeat the command to initiate another sweep. New command for xDot essentials & advanced.

Syntax

Command
AT+SW=[START],[STOP],[STEP],[DURATION],[POWER]
AT+SW?

Parameter

Parameters and Values

- Start Beginning RF range value Hz
- Stop Ending RF range value in Hz
- Step Step size in Hz
- Duration How long at each step in ms.
- Power Transmit power value 0-20 dB.

Command Examples

AT+SW


AT+SW=902000000,915000000,1000000,1000,20

AT+SW=902000000,915000000,100000,100,11

```
AT+SW=863000000,870000000,100000,100,11
```

```
AT+SW=863000000,870000000,100000,100,10
```

Example

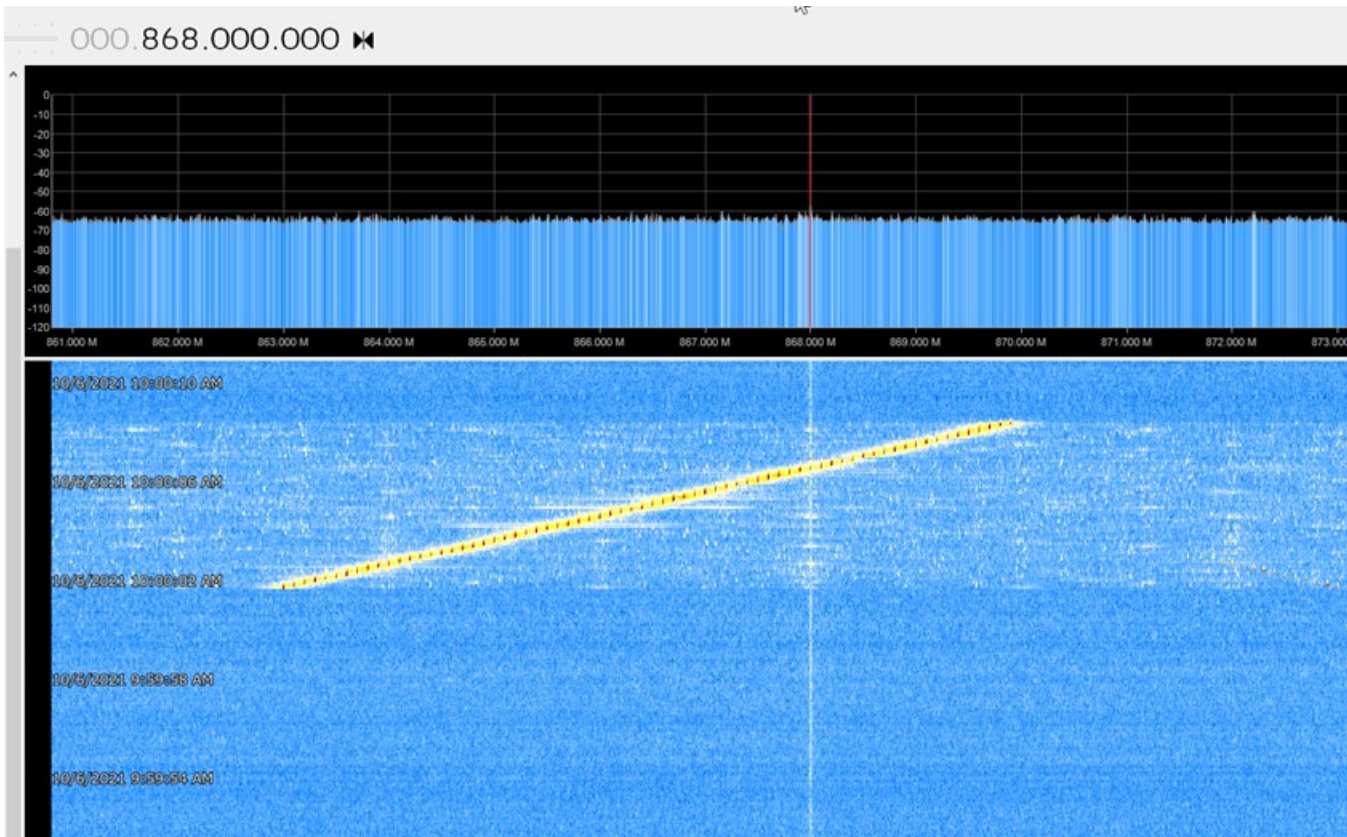

AT+PN Public Network Mode

Configures the end device to function on a public or private LoRaWAN network or a private MTS network. When either public or private LoRaWAN network is enabled, the device functions as a LoRaWAN device as specified in LoRa Alliance documentation.

Private MTS Network

When you enable Private MTS mode, the device operates on a private network with the following modifications adjusted for the local network server available on the Conduit:

- Syncword 0x12 is used

- Select downlink frequencies for US915/AU915 using UPLINK-CHANNEL / 8. For example, an uplink using channel 34 would be responded to in Rx1 on 500 kHz Channel 4.

- Join Delay settings are independently configurable with the AT+JD command (refer to [AT+JD](#)).

- Private MTS default Join windows open at 0.5 seconds after transmission ends for OTA.

- Rx1 and Rx2 windows are fixed to each AT+FSB setting (refer to [AT+FSB](#)).

LoRaWAN Public

This is the default setting.

Syncword 0x34 is used.

- Select downlink frequencies for US915/AU915 using UPLINK-CHANNEL % 8. For example, an uplink using channel 34 would be responded to in Rx1 on 500 kHz Channel 2.
- Join Delay settings are independently configurable with the AT+JD command (refer to [AT+JD](#)). LoRaWAN Join windows open at the default 5/6 seconds after end of transmission for OTA
- Set AT+FSB=1-8 to enable hybrid functionality (refer to [AT+FSB](#)).

LoRaWAN Private

- Syncword 0x12 is used.
- Select downlink frequencies for US915/AU915 using UPLINK-CHANNEL % 8. For example, an uplink using channel 34 would be responded to in Rx1 on 500 kHz Channel 2.
- Join Delay settings are independently configurable with the AT+JD command (refer to [AT+JD](#)). LoRaWAN Join windows open at the default 5/6 seconds after end of transmission for OTA
- Set AT+FSB=1-8 to enable hybrid functionality (refer to [AT+FSB](#)).

Syntax

Command
AT+PN=<parameter1>
AT+PN?

Parameters and Values

Parameter1

- 0 Private MTS network mode
- 1 Public LoRaWAN network mode. (Default)
- 2 Private LoRaWAN network mode.

Command with Response Examples

AT+PN=0

OK

Public/Private LoRaWAN Mode Example

US 64 channel

AT+FSB=0

(AT+PN=1) sets the SyncWord to 0x34

(AT+PN=2) sets the SyncWord to 0x12

(AT+JD=5) sets Join Delay to 5 seconds

Downlink channel is (uplink_channel modulo 8)

OK

Public/Private LoRaWAN Hybrid Mode Example

US 8 channel

AT+FSB=(1 - 8)

(AT+PN=1) sets the SyncWord to 0x34

```
(AT+PN=2) sets the SyncWord to 0x12
(AT+JD=5) sets Join Delay to 5 seconds
Downlink channel is (uplink_channel modulo 8)
OK
```

Private MTS Hybrid Mode Example

```
AT+FSB=(1 - 8)
(AT+PN=0) sets the SyncWord to 0x12
(AT+JD=1) sets Join Delay to 1 seconds
Downlink channel is (uplink_channel / 8)
OK
```

AT+JBO Join Byte Order

Deprecated

Sets the byte order (LSB or MSB first) in which the device EUI is sent to the gateway in a join request.

Note: Used only for connecting to non-compliant network servers.

Syntax

Command
AT+JBO=<parameter1>
AT+JBO?

Parameters and Values

Parameter1

- | | |
|---|---------------------|
| 0 | LSB first (Default) |
| 1 | MSB first |

Command with Response Examples

```
AT+JBO=0
```

```
OK
```

```
AT+JBO?
```

```
0
```

```
OK
```

AT+NJM Network Join Mode

Controls how the end device establishes communications with the gateway.

- When AT+NJM=2 (AUTO_OTA) and AT+PS is set to 1 the session will not be defaulted on reset or power. When AT+NJM=1 (OTA) AT+PS will not be applied and session stays in flash in either case.

Syntax

Command
AT+NJM=<parameter1>
AT+NJM

Parameters and Values

Parameter1

0 Manual configuration

1 OTA network join (Default)

2 Auto OTA network join on start up

CAUTION: Setting +NJM=2 causes the Dot to join immediately. Configure network settings and OTA mode before setting to AUTO_OTA mode.

3 Peer-to-peer mode

Command with Response Examples

```
AT+NJM=1
```

```
OK
```

```
AT+NJM?
```

```
1
```

```
OK
```

AT+JOIN Join Network

Join network. For US915 and EU868 models +NI, +NK must match gateway settings in order to join. US915 must also match +FSB setting.

Syntax

Command
AT+JOIN
AT+JOIN=2

Parameters and Values

Adding “=2” causes the join request to use the transmit data rate configured with the +TXDR command. Without “=2”, the data rate is selected using an algorithm based on the current DevNonce counter.

Error Messages

- Failed to join network – No join response received from gateway.
- Join backoff – End device must wait for next available free channel to join. Issue AT+TXN to get the wait time.

Command with Response Examples

Same responses for AT+JOIN and AT+JOIN=2

```
AT+JOIN
Successfully joined network
```

```
OK
```

```
AT+JOIN
Failed to join network
```

```
ERROR
```

```
AT+JOIN
Join backoff
```

```
ERROR
```

AT+JR Join Retries

Enabling this setting allows the dot to search each sub-band when trying to join the Conduit when in AUTO_OTA mode. The dot can then recover if the Conduit changes sub-band after it detects the lost network connection with AT+LCT used with AT+LCC or AT+ACK. The dot attempts to join on the configured AT+FSB the number of join retries, if unsuccessful it attempts on the next AT+FSB setting.

Syntax

Command
AT+JR=<parameter1>
AT+JR?

Parameters and Values

Parameter1

0	Disable
1-255	Seconds enabled (Default is 2)

Command with Response Examples

```
AT+JR=5
```

```
OK
```

```
AT+JR?
5
```

```
OK
```

AT+JD Join Delay

Allows the dot to use non-default join receive windows, if required by the network it is attempting to connect to. Initiating a join request opens a receive window to listen for the response. This command allows you to alter the default timing of the window.

Syntax

Command
AT+JD=<parameter1>
AT+JD?

Parameters and Values

Parameter1

1-15 seconds (Default is 5)

Command with Response Examples

AT+JD=1

OK

AT+JD?

1

OK

Over-the-Air Activation (OTA)

LoRa allows OTA activation between a device and a network to generate session keys based on a pre-shared key. During OTA, the device exchanges Device and Network IDs with the server. If the Network ID matches the server's configuration, session keys are generated using the pre-shared keys and random nonce values from the device and server. Then, a join accept message is sent to the device with the server's random nonce value encrypted with the pre-shared key. After this initial exchange, only session keys are used for subsequent message encryption.

To use OTA, configure the network ID and network key.

AT+NI Network ID

Configures what is referred to as the JoinEUI in LoRaWAN specification v1.0.4. Configures what is referred to as the AppEUI in LoRaWAN specification v1.0.3.

NOTE: When configured with parameter1 = 2, the EUI is written to write protected space so that a factory default (AT&F) will load or restore the value.

Syntax

Command
AT+NI=<parameter1>,<parameter2>
AT+NI?

Parameters and Values

Parameter1

0 Second parameter is a hex key.

1 Second parameter is a string from 8 - 128 characters long.

2 Second parameter is a hex key and is automatically stored in write protected memory.

Parameter2

16 bytes of hex data.

If Parameter1 is set to 1, a character string up to 128 characters.

Command with Response Examples

```
AT+NI=0,00:11:22:33:44:55:66:77
```

```
OK
```

```
AT+NI?
```

```
00-11-22-33-44-55-66-77
```

```
OK
```

```
AT+NI=1,This string can be up to 128 characters long.
```

```
OK
```

```
AT+NI?
```

```
61-63-4d-b3-8a-2b-86-22
```

```
This string can be up to 128 characters long.
```

```
OK
```

```
AT+NI=2,cd-d7-15-e5-2b-dd-a6-27
```

```
OK
```

```
AT+NI? (Shows the value in working memory)
```

```
61-63-4d-b3-8a-2b-86-22
```

```
Passphrase: `This string can be up to 128 characters long.`
```

```
OK
```

```
AT&F (Moves the value from write protected to working memory)
```

```
OK
```

```
AT+NI?
```

```
cd-d7-15-e5-2b-dd-a6-27
```

```
OK
```

AT+NK Network Key

Configures what is referred to as the AppKey in the LoRaWAN specification.

NOTE: When configured with parameter1 = 2, the EUI is written to write protected space so that a factory default (AT&F) will load or restore the value.

Syntax

Command
AT+NK=<parameter1>,<parameter2>
AT+NK?

Parameters and Values

Parameter1

- 0 Second parameter is a hex key.
- 1 Second parameter is a string up to 128 characters long.
- 2 Second parameter is a hex key and is automatically stored in write protected memory.

Parameter2

16 bytes of hex data.

If Parameter1 is set to 1, a character string up to 128 characters.

Command with Response Examples

```
AT+NK=0,88:99:AA:BB:CC:DD:EE:FF:00:11:22:33:44:55:66:77
```

```
OK
```

```
AT+NK?
```

```
88.99.aa.bb.cc.dd.ee.ff.00.11.22.33.44.55.66.77
```

```
OK
```

```
AT+NK=1,This String can be up to 128 characters long.
```

```
OK
```

```
AT+NK?
```

```
E1.07.15.95.06.50.46.80.89.cf.2e.6e.2b.ea.f9.cf  
Passphrase: 'This String can be up to 128 characters long.'
```

```
OK
```

```
AT+NK=2,bc.0b.bb.99.9b.17.4c.36.38.8c.0f.cf.ea.68.f3.f8  
Set Protected AppKey: bc.0b.bb.99.9b.17.4c.36.38.8c.0f.cf.ea.68.f3.f8
```

```
OK
```

```
AT+NK? (Shows the value in working memory)
```

```
E1.07.15.95.06.50.46.80.89.cf.2e.6e.2b.ea.f9.cf  
Passphrase: 'This String can be up to 128 characters long.'
```

```
OK
```

```
AT&F (Moves the value from write protected to working memory)
```

```
OK
```

```
AT+NK?
```

```
bc.0b.bb.99.9b.17.4c.36.38.8c.0f.cf.ea.68.f3.f8
```

```
OK
```

Manual Activation

If supported by the network server, the Dot can be activated manually. To do this, configure the network address, network session key, and data session key.

AT+NA Network Address

Sets network address in MANUAL join mode, the server will assign an address in OTA modes. (Supports modifying 8 multicast sessions, which can be saved and restored using AT+SS/AT+RS).

Note: There are two options for this command using either one or two parameters. For unicast, use one parameter (parameter1) to set or return the unicast value. For multicast, use two parameters (parameter1, parameter2) to set or return the multicast value (where parameter1 is the multicast session number and parameter2 is the multicast value).

Syntax

Command
AT+NA=<parameter1>,<parameter2>
AT+NA=<parameter1>,<?>

Parameters and Values

Parameter1

For unicast: 4 bytes of hex data **OR** For multicast: Number of Multicast session [1-8]

Parameter2

For multicast only: 4 bytes of hex data.

Command with Response Examples

```
AT+NA= 1,01:fa:b0:1c
Set Network Address: 01:fa:b0:1c
```

OK

```
AT+NA=1, ?
01:fa:b0:1c
```

OK

AT+NSK Network Session Key

Sets network session key in MANUAL join mode, will be automatically set in OTA modes. Also supports modifying multicast sessions.

Note: There are two options for this command using either one or two parameters. For unicast, use one parameter (parameter1) to set or return the unicast value. For multicast, use two parameters (parameter1, parameter2) to set or return the multicast value (where parameter1 is the multicast session number and parameter2 is the multicast value).

Syntax

Command

```
AT+NSK=<parameter1>,
<parameter2>
```

```
AT+NSK=<parameter1>,<?>
```

Parameters and Values**Parameter1**

For unicast, 16 bytes of hex data **OR** For multicast, Number of Multicast session [1-8].

Parameter2

For multicast only, 16 bytes of hex data.

Command with Response Examples

```
AT+NSK=1,00:11:22:33:44:55:66:77:88:99:AA:BB:CC:DD:EE:FF
```

```
Set Network Session Key: 00.11.22.33.44.55.66.77.88.99.aa.bb.cc.dd.ee.ff
```

```
OK
```

```
AT+NSK=1,?
```

```
00.11.22.33.44.55.66.77.88.99.aa.bb.cc.dd.ee.ff
```

```
OK
```

AT+DSK Data Session Key

Sets data session key in MANUAL join mode, will be automatically set in OTA modes. Used for AES-128 encryption of transferred data. Supports modifying multicast sessions.

Note: There are two options for this command using either one or two parameters. For unicast, use one parameter (parameter1) to set or return the unicast value. For multicast, use two parameters (parameter1, parameter2) to set or return the multicast value (where parameter1 is the multicast session number and parameter2 is the multicast value).

Syntax**Command**

```
AT+DSK=<parameter1>,<parameter2>
```

```
AT+DSK=<parameter1>,<?>
```

Parameters and Values**Parameter1**

For unicast, 16 bytes of hex data **OR** for multicast, Number of Multicast session [1-8]

Parameter2

For multicast only, 16 bytes of hex data.

Command with Response Examples

```
AT+DSK=1,FF:EE:DD:CC:BB:AA:99:88:77:66:55:44:33:22:11:00
```

```
Set Multicast Application Session Key 1:
```

```
ff. ee. dd. cc. bb. aa. 99. 88. 77. 66. 55. 44. 33. 22. 11. 00
```

OK

```
AT+DSK=1, ?
```

```
ff. ee. dd. cc. bb. aa. 99. 88. 77. 66. 55. 44. 33. 22. 11. 00
```

OK

AT+ULC Uplink Counter

A device using MANUAL join mode a network server may reject uplink packets, if they do not have the correct counter value. This setting is available for an application to manage this session parameter. Otherwise, use AT+SS and AT+RS to save this setting to flash in any join mode.

Syntax

Command
AT+ULC=<parameter1>
AT+ULC?

Parameters and Values

Parameter1

0-4294967295 (Default is 1).

Command with Response Examples

```
AT+ULC=1
```

OK

```
AT+ULC?
```

1

OK

AT+DLC Downlink Counter

A device using MANUAL join mode, may reject downlink packets if they do not have the correct counter value. This setting is available for an application to manage this session parameter. Otherwise, use AT+SS and AT+RS to save this setting to flash in any join mode. Also, supports modifying multicast sessions.

Note: There are two options for this command using either one or two parameters. For unicast, use one parameter (parameter1) to set or return the unicast value. For multicast, use two parameters (parameter1, parameter2) to set or return the multicast value (where parameter1 is the multicast session number and parameter2 is the multicast value).

Syntax

Command
AT+DLC=<parameter1>,<parameter2>
AT+DLC=<parameter1>,<?>

Parameters and Values

Parameter1

For Unicast, Value of the Downlink Counter, a 32-bit unassigned integer with a range of 0-4294967295 (Default is 1) **OR** For Multicast, Number of the Multicast session [1-8].

Parameter2

For Multicast only, Value of the Downlink Counter, a 32-bit unassigned integer with a range of 0-4294967295 (Default is 1).

Command with Response Examples

```
AT+DLC=1,1
Sets the downlink counter of session #1
OK
```

```
AT+DLC=1,?
1
```

```
OK
```

```
help AT+DLC
AT+DLC: Get or set the downlink counter
```

```
OK
```

```
AT+DLC=?
AT+DLC: (0-4294967295) or (1-8), (0-4294967295)
```

```
OK
```

AT+GK Generic App Key

Set GenAppKey for multicast McKEKey derivation.

Syntax

Command
AT+GK
AT+GK=<parameter 1>

Parameters and Values

Parameter1

Gen App Key (hex:16)

Command with Response Examples

```
AT+GK
00.00.00.00.00.00.00.00.00.00.00.00.00.00.00
```

```
OK
```

```
AT+GK=bc.0b.bb.99.9b.17.4c.36.38.8c.0f.cf.ea.68.f3.f8
Set Gen App Key: bc.0b.bb.99.9b.17.4c.36.38.8c.0f.cf.ea.68.f3.f8
```

OK

AT+DWT Transmit Dwell Time

Set or get transmit dwell time for AS923 and AU915 channel plans. Normally this is enabled and set by the network server after joining the network. In manual mode, this may need to be set on the module out-of-band. New command for xDot essentials & advanced.

Syntax

Command
AT+DWT=<parameter1>,<parameter2>
AT+DWT

Parameters and Values

Parameter1

Disable or Enable uplink dwell time (0, 1) Default is 1, enabled

Parameter2

Disable or Enable downlink dwell time (0, 1) Default is 1, enabled

Command with Response Examples

```
AT+DWT=1,1
```

OK

```
AT+DWT
```

```
1,1
```

OK

AT+DS Default Session

Reset the manual session to the default RF parameters. The session RF parameters can be changed by the network, use this command to reset them. New command for xDot essentials & advanced.

Syntax

Command
AT+DS

Parameters and Values

None

Command with Response Examples

```
AT+DS
```

OK

Network Joining

OTA Network Join

After configuring the network ID and network key on the mDot, send a join packet with the device ID, network ID, and a dev-nonce value. The network server checks the network ID and assigns an address, which is returned with the network ID and app-nonce value. Session keys are generated independently on the device and network server using the network address, network ID, nonce-values, and network key.

- **AT+NJM=1** Configure mDot for OTA join mode (default).
- **AT+JOIN** Send a join request to the server.
- **AT+NJS** Display current join status 0:not joined, 1:joined.

Auto OTA Network Join

After a successful join, the session information is stored in flash. This session information is restored when waking from sleep. If the device is reset or the power cycled, session information is reset and a join is attempted. The session information is valid as long as the Dot checks in before the Conduit's lease-time expires.

AT+NJM=2 Configure Dot for AUTO OTA join mode.

AT+JOIN Reloads the session info from flash.

AT+JOIN=1 Force Dot to perform OTA join regardless for saved session.

Ensuring Network Connectivity

AT+NJS Network Join Status

Displays the last known network join state, which helps determine if communication has been lost. Join status is also available on Associate Pin (mDot:A2, xDot:GPIO0).

Syntax

Command
AT+NJS=<parameter1>
AT+NJS?

Parameters and Values

Parameter1

0 Not joined.

1 Joined

Command with Response Examples

AT+NJS

0

OK

AT+NJS?

0

OK

Pin Output

Join status is also available on Associate Pin (mDot:A2, xDot:GPIO0).

AT+JN Join Nonces

Sets OTA Join Nonce. Join Dev Nonce increments with each Join Request sent. Join App Nonce is validated to increment with each Join Accept received. Both are reset to 0 when the NetworkID/AppEUI changes.

Syntax

Command
AT+JN
AT+JN=<parameter1>,<parameter2>
AT+JN?

Parameters and Values

Parameter1

Dev Nonce (0-65535)

Parameter2

App Nonce (0-16777215)

Command with Response Examples

```
AT+JN
1,1
```

OK

```
AT+JN=2,2
```

OK

```
AT+JN?
2,2
```

OK

AT+JNV Enable Join Nonce Validation

Enable or disable join app nonce validation in join accept from network. Default is enabled (1). Disable value is 0.

NOTE: When enabled, the network must consist of a single LNS or Join server. If moving between networks the join accept will be rejected.

Syntax

Command
AT+JNV
AT+JNV=<parameter1>

Parameters and Values

Parameter1

Disable or Enable (0, 1) Default is 1, enabled

Command with Response Examples

```
AT+JNV
```

```
1
```

```
OK
```

```
AT+JNV=0
```

```
OK
```

AT+PING Send Ping

Sends a ping to the gateway. The gateway responds with a pong containing RSSI and SNR, which the end device displays. RSSI ranges from -140dB to -0dB and SNR ranges from -20dBm to 20dBm.

Syntax**Command**

```
AT+PING
```

Parameters and Values

None

Command with Response Examples

```
AT+PING
```

```
-31,10.0
```

```
OK
```

```
AT+PING
```

```
Network Not Joined
```

```
ERROR
```

AT+ACK Require Acknowledgment

The maximum number of times the end device tries to retransmit an unacknowledged packet. Options are from 1 to 15.

Note: When ACKs are enabled, the AT+SEND command does not return until the ACK is received or attempts are exhausted. See the +SEND command for details.

Syntax**Command**

```
AT+ACK=<parameter1>
```

```
AT+ACK?
```

Parameters and Values

Parameter1

0 ACKs are not required. (Default)

1-15 The maximum number of attempts without an acknowledgment.

Command with Response Examples

```
AT+ACK=0
```

```
OK
```

```
AT+ACK?
```

```
0
```

```
OK
```

AT+NLC Network Link Check

Performs a network link check. The first number in the response is the dBm level above the demodulation floor (not to be confused with the noise floor). This value is from the perspective of the signal sent from the end device and received by the gateway. The second number is the count of gateways reporting the link-check request to the network server.

When the network link check is performed, an empty packet is sent to the gateway and the network server may include a downlink payload with the command answer. If a payload is included, it displays on the next line. The AT+RXO setting determines payload format.

Syntax

Command
AT+NLC
AT+NLC?

Parameters and Values

None

Command with Response Examples

```
AT+NLC
```

```
11, 2
```

```
OK
```

```
AT+NLC
```

```
No response from network
```

```
ERROR
```

```
AT+NLC
```

```
Network Not Joined
```

```
ERROR
```

```
AT+NLC
26,1
40
```

```
OK
```

AT+LCC Link Check Count

Performs periodic connectivity checking. This feature is an alternative to enabling ACK for all packets in order to detect when the network is not available or the session information has been reset on the server.

Syntax

Command

```
AT+LCC=<parameter1>
```

Command

```
AT+LCC?
```

Parameters and Values

Parameter1

0 Disabled (Default)

1-255 Number of packets sent before a link check is performed. Link checks are not sent if ACKs are enabled.

Command with Response Examples

```
AT+LCC=3
```

```
OK
```

```
AT+LCC?
```

```
3
```

```
OK
```

AT+LCT Link Check Threshold

Threshold for the number of consecutive link check or ACK failures to tolerate before setting the join status to not joined.

Syntax

Command

```
AT+LCT=<parameter1>
```

```
AT+LCT?
```

Parameters and Values

Parameter1

0 Disabled (Default)

1-255 Number of failures before not joined status is set

Command with Response Examples

```
AT+LCT=3
```

```
OK
```

```
AT+LCT?
```

```
3
```

```
OK
```

AT+BTO Class B Timeout

Set the timeout the network expects to receive an ACK for a confirmed downlink received in a Class B window.

Syntax

Command
AT+BTO=<parameter1>

Parameters and Values

Parameter 1 Timeout period from 0-120 seconds. (Default is 8).

Command with Response Examples (for setup of a Class B device)

```
AT+BTO=10
```

```
OK
```

AT+CTO Class C Timeout

Set the timeout the network expects to receive an ACK for a confirmed downlink received in a Class C window.

Syntax

Command
AT+CTO=<parameter1>

Parameters and Values

Parameter 1 Timeout period from 0-120 seconds. (Default is 8).

Command with Response Examples (for setup of a Class C device)

```
AT+CTO=10
```

```
OK
```

Preserving, Saving, and Restoring Sessions

AT+SS Save Network Session

Saves the network session information (join) over resets allowing for a session restore (AT+RS) without requiring a join. This command should be issued after the Dot has joined. See *AT+PS* if using auto join mode.

Syntax

Command
AT+SS
AT+SS?

Parameters and Values

None

Command with Response Examples

AT+SS

OK

AT+RS Restore Network Session

Restores the network session information (join) that was saved with the AT+SS command.

Syntax

Command
AT+RS
AT+RS?

Parameters and Values

None

Command with Response Examples

AT+RS

OK

AT+PS Preserve Session

Preserves the network session information over resets when using auto join mode (AT+NJM). If not using auto join mode, use with the save session command (AT+SS).

Syntax

Command
AT+PS=<parameter1>
AT+PS?

Parameters and Values

Parameter1

0 Off (Default)

1 On

Command with Response Examples

AT+PS=0

OK

AT+PS?

0

OK

AT&WP Save Protected Settings

Saves protected settings available in all firmware. This command creates a write protected configuration to flash (DevEUI, AppEUI, AppKey, and Frequency Band)

Syntax

Command
AT&WP

Parameters and Values

None

Command with Response Examples

AT&WP

OK

Chapter 4 – Sending and Receiving Packets

Channels and Duty Cycles

For reference, use the +TXCH command to display channels used with frequency hopping.

Note: Europe 868 MHz deployments have a 1% duty cycle, meaning your devices can be on air only 1% of the time per hour. This limitation is part of the European radiated emission requirements and cannot be avoided or changed. Sending more data than the air time allows results in a transmit error – no free channel debug notice.

AT+CHM Channel Mask

Sets a channel mask to enable or disable channels to be used to transmit packets.

- US915/AU915 — 72 bit mask (MSB)
- EU868 — 16 bit mask (MSB)

Syntax

Command
AT+CHM=<parameter1>,<parameter2>
AT+CHM?

Parameters and Values

US915/AU915

Parameter1,Parameter2

0,00FF	Enables channels 0-7, disables channels 8-15
0,FFFF	Enables channels 0-15
2,00FF	Enables channels 32-39, disables channels 40-47
4,00FF	Enables channels 64-71

EU868

Parameter1,Parameter2

0,000F	Enables default channels 0-3, disables channels 4-15
--------	--

Command with Response Examples

US915

```
AT+FSB=0
```

```
OK
```

```
AT+CHM
```

```
00FFFFFFFFFFFFFFFFFFFF
```

```
OK
```

```
AT+FSB=1
```

```
OK
```



```
AT+CHM
000100000000000000FF
```

```
OK
```

```
AT+FSB=2
```

```
OK
```

```
AT+CHM
0002000000000000FF00
```

```
OK
```

EU868

```
AT+CHM=0,00FF
```

```
OK
```

```
AT+CHM
00FF
```

```
OK
```

AT+TXCH Transmit Channel

With an US 951MHz model, lists the available channels in the current AT+FSB setting

With an EU 868MHz model, lists the available channels, including additional channels sent by the network server with the JoinAccept message. With an EU 868MHz model, this command can be used to add additional channels

EU868 Adding a Channel

AT+TXCH=<INDEX>,<FREQUENCY>,<RANGE> INDEX – 3-15 FREQUENCY – 863000000-870000000 RANGE – datarate range

For example, 40 -> DR4:max DR0:min, 77 -> DR7:max DR7:min

Syntax

Command
AT+TXCH
AT+TXCH?

Parameters and Values

None

Command with Response Examples

```
AT+FSB=1
```

```
OK
```

AT+TXCH

Index	Frequency	DR	Max	Min	On
0	902300000	3	0	1	1
1	902500000	3	0	1	1
2	902700000	3	0	1	1
3	902900000	3	0	1	1
4	903100000	3	0	1	1
5	903300000	3	0	1	1
6	903500000	3	0	1	1
7	903700000	3	0	1	1
U	903000000	4	4	1	1
R2	923300000	8	8		

OK

AT+FSB=1

OK

AT+TXCH

Index	Frequency	DR	Max	Min	On
0	902300000	3	0	1	1
1	902500000	3	0	1	1
2	902700000	3	0	1	1
3	902900000	3	0	1	1
4	903100000	3	0	1	1
5	903300000	3	0	1	1
6	903500000	3	0	1	1
7	903700000	3	0	1	1
U	903000000	4	4	1	1
R2	923300000	8	8		

OK

Note the following for US915:

U : Uplink Channel for DR4:SF8BW500

R2 : Frequency and datarate for second receive window

In public mode, R2 defaults to 923.3 DR8

In private mode, R2 is defaulted by AT+FSB setting 1:923.3,2:923.9,...

Add EU868 FSK Channel at Index 8**EU868 Before Join**

AT+TXCH

Index	Frequency	DR	Max	Min	On
0	868100000	5	0	1	1
1	868300000	6	0	1	1
2	868500000	5	0	1	1

3	0	0	0	0
4	0	0	0	0
5	0	0	0	0
6	0	0	0	0
7	0	0	0	0
8	0	0	0	0
9	0	0	0	0
10	0	0	0	0
11	0	0	0	0
12	0	0	0	0
13	0	0	0	0
14	0	0	0	0
15	0	0	0	0
R2	869525000	0	0	

OK

EU868 After Join

AT+TXCH

Index	Frequency	DR	Max	Min	On
0	868100000	5	0	1	
1	868300000	6	0	1	
2	868500000	5	0	1	
3	866100000	5	0	1	
4	866300000	5	0	1	
5	866500000	5	0	1	
6	866700000	5	0	1	
7	866900000	5	0	1	
8	0	0	0	0	
9	0	0	0	0	
10	0	0	0	0	
11	0	0	0	0	
12	0	0	0	0	
13	0	0	0	0	
14	0	0	0	0	
15	0	0	0	0	
R2	869525000	0	0		

AT+LBT Listen Before Talk

Enables or disables the Listen Before Talk function.

Syntax

Command

AT+LBT=<parameter1>,<parameter2>

AT+LBT?

Parameters and Values

Parameter1

0 Disable

0-65535	Time for the listen before talk delay in microseconds (μ s).
Parameter2	
0	Disable
-127-128 dBm	Threshold

Command with Response Examples

Get current LBT configuration: 0,0 means it is disabled:

```
AT+LBT
0,0
```

OK

Set LBT to -65dB threshold and 5ms sample time:

```
AT+LBT=5000,-65
```

OK

Verify configuration:

```
AT+LBT
5000,-65
```

OK

AT+TXN Transmit Next

Returns the time, in milliseconds, until the next free channel is available to transmit data. The time can range from 0-2793000 milliseconds.

EU868 time to wait may be duty-cycle limit on channel or network imposed Join duty-cycle. US915 will only be affected by the network imposed Join duty-cycle.

Network imposed join duty-cycle in LoRaWAN 1.0.1:

1.0%	0-1 hour
0.1%	1-10 hours
0.01%	10+ hours

Syntax

Command
AT+TXN
AT+TXN?

Parameters and Values

None

Command with Response Examples

```
AT+TXN
0
```

OK

```
AT+TXN?
```

```
0
```

```
OK
```

AT+TOA Time On Air

Displays the amount of on air time, in milliseconds, required to transmit the number of bytes specified at the current data rate. (Included for informational purposes.)

Syntax

Command
AT+TOA=<parameter1>
AT+TOA?

Parameters and Values

Parameter1

0-242 The number of bytes used to calculate the time on air.

Command with Response Examples

```
AT+TOA=128
```

```
738
```

```
OK
```

```
AT+TOA?
```

```
Invalid parameter, expects (0-242)
```

```
ERROR
```

AT+FO Frequency Offset

Used to adjust TX frequency offset.

Syntax

Command
AT+FO=<parameter1>
AT+FO?

Parameters and Values

Parameter1

Transmit frequency offset in Hz (-32768,32768)

Command with Response Examples

```
AT+FO
```

```
0
```

```
OK
```

```
AT+FO=5000
```

```
OK
```

```
AT+FO
5000
```

```
OK
```

AT+DUTY Duty Cycle

Set duty cycle maximum or per band.

NOTE: The system applies the most restrictive value of the different settings.

Command

```
AT+DUTY=<parameter1> OR AT+DUTY= <parameter1>,
<parameter2>
```

SyntaxParameters and Values

Parameter1

Duty cycle maximum (0-15) OR Duty band index (when there are 2 parameters)

Parameter2

Duty band off-ratio (0-65535)

Value1 (for Duty Cycle Max or Duty Band Index)	Percentage
0	100%
1	50%
2	25%
3	12.5%
4	6.25%
5	3.13%
6	1.56%
7	0.78%
8	0.39%
9	0.20%
10	0.097%
11	0.049%
12	0.024%
13	0.012%
14	0.006%
15	0.003%
Value2 (for Duty band off-ratio using two parameters)	Percentage

Note: Using two parameters, Duty cycle = 1/value2

2	50%
3	33%
4	25%
5	20%
10	10%
100	1%
1000	0.1%
10000	0.01%

Command with Response Examples

```
AT+DUTY=1
```

```
OK
```

```
AT+DUTY=0,100
```

```
0 915000000 928000000 100
```

```
OK
```

```
AT+DUTY?
```

```
Max 1
```

```
Index      Freq Low      Freq High      Off Ratio
```

```
0          915000000    928000000     100
```

```
OK
```

Configuring

AT+MAC Inject MAC Command

When used without a parameter the MAC command buffer to be sent with the next packet is displayed. The MAC command buffer can be cleared by passing an argument of '0'. Changes made by MAC commands through this command or made by the server can be saved with AT+SS and restored with AT+RS.

- **LinkADRRReq:** If ADR is enabled, changes device's datarate and power. Changes the channel mask and redundancy regardless of ADR setting.
- **DutyCycleReq:** Sets device's total time on air duty cycle.
- **RxParamSetupReq:** Changes downlink frequency and datarates.
- **DevStatus:** Requests the device's status, battery, and RX packet SNR value.
- **NewChannelReq:** Requests the device to add or delete a channel.
- **RxTimingSetup:** Changes the delay from end of TX to opening of RX1.

Syntax

Command
AT+MAC=<parameter1>
AT+MAC?

Parameters and Values

Parameter1

LinkADDRReq	Format: ID (1) DR_PWR (1) MASK (2) CTRL_REP (1) Example: 0350FF0001 -> DR: 5 PWR: 0 MASK: FF00 CTRL: 0 REP: 1
ID	MAC command ID
DR	Datarate index US915 0-4, AU915 0-4, EU868 0-7
PWR	Power index US915 0-10, AU915 0-10, EU868 0-5
MASK	16 bit mask for enabling channels
CTRL	Instructions for applying the 16-bit mask field
REP	Redundancy setting to repeat a packet unless downlink is received

DutyCycleReq	Format: ID (1) MDC (1)
ID	MAC command ID
MDC	MAX_DUTY_CYCLE (MDC) – duty cycle setting ($1 / 2^{\text{MDC}}$)
	Values:
	0400 100%
	0401 50%
	040F 0.003 %

RxParamSetupReq	Format: ID (1) DLSettings (1) Frequency (3) Example: 050468E28C ? RX1O: 0 RX2: 5 FREQ: 923300000
ID	MAC command ID
DLSettings	Datarate offset for RX1 and datarate index for RX2
Frequency	3 bytes of frequency in 100 Hz (LSB)

DevStatus	Format: ID (1) Example: 06
ID	MAC command ID

NewChannelReq	Note: EU868 only, Channels 0-2 cannot be changed. Format: ID (1) INDEX (1) FREQ (3) RANGE (1) Example: 0703F87D8440 -> INDEX: 3 FREQ: 868300000 RANGE: MAX:4 MIN:0
ID	MAC command ID
INDEX	Channel Index
FREQ	Channel frequency in 100 Hz
RANGE	Datarate range (MAX:4,MIN:4)

RxTimingSetup	Format: ID (1) DELAY (1) Example: 0801 ? DELAY: 1 second
ID	MAC command ID
Delay	Delay in seconds until RX1

Command with Response Examples

Inject Device Status MAC Command

```
AT+MAC=06
```

```
OK
```

Show MAC Commands Buffer to be Sent in Next Packet

```
AT+MAC
06ff00
```

```
OK
```

Clear MAC Commands Buffer to be Sent in Next Packet

```
AT+MAC=0
```

```
OK
```

```
AT+MAC
```

```
OK
```

AT+DC Device Class

Sets the device class. The LoRaWAN 1.0 specification defines the three device classes, Class A, B and C as follows:

Note: Currently only Class A and Class C are supported.

- Class A: Bi-directional End Devices** allow for bi-directional communications where each end device's uplink transmission is followed by two short downlink receive windows. The transmission slot scheduled by the end device is based on its communication needs with a small variation based on a random time basis (ALOHA-type protocol). This Class A operation is the lowest power end device system for applications that only require downlink communication from the server shortly after the end device has sent an uplink transmission. Downlink communications from the server at any other time have to wait until the next scheduled uplink.
- Class B: Bi-directional end devices with scheduled receive slots** allow for more receive slots. In addition to the Class A random receive windows, Class B devices open extra receive windows at scheduled times. For the end device to open a receive window as scheduled, it must receive a time synchronized beacon from the gateway. This allows the server to know when the end device is listening.
- Class C: Bi-directional end devices with maximal receive slots** have nearly continuously open receive windows, which close only when transmitting. Class C end devices use more power to operate than Class A or Class B, but they offer the lowest latency for server to end device communication.

Syntax

Command
AT+DC=<parameter1>
AT+DC?

Parameters and Values

Parameter1

A Class A device. (Default)

B Class B device.

C Class C device.

Command with Response Examples

```
AT+DC=A
```

```
OK
```

AT+URC Unsolicited Response Code

Enable or disable unsolicited response codes. When you enable Class B and C, downlinks are presented in the serial output. Use with AT+RXO=3 to set output to extended HEX with additional packet info, Type, Addr, FCNT, Port, Payload. If AT+RXO != 3 RECV is displayed and use AT+RECV to retrieve the packet.

Syntax

Command

```
AT+URC=<parameter1>
```

Parameters and Values

Parameter1

Enable or disable (0: disable,1: enable)

Command with Response Examples

```
AT+URC=0
```

```
OK
```

```
AT+URC=1
```

```
OK
```

AT+AP Application Port

Sets the port used for application data. Each LoRaWAN packet containing data has an associated port value. Port 0 is reserved for MAC commands, ports 1-223 are available for application use, and port 233-255 are reserved for future LoRaWAN use. Ports 200, 201 and 202 are used for Multicast and FOTA.

Syntax

Command

```
AT+AP=<parameter1>
```

```
AT+AP?
```

Parameters and Values

Parameter1

1-223 The port used for application data.

Command with Response Examples

```
AT+AP=1
```

OK

AT+AP?

1

OK

AT+TXP Transmit Power

Configures the output power of the radio in dBm, before antenna gain. The mac layer will attempt to reach this output level but limit any transmission to the local regulations for the chosen frequency.

Note: Refer to AT+ANT to configure antenna gain.

Syntax

Command
AT+TXP=<parameter1>
AT+TXP?

Parameters and Values

Parameter1

0-20 dB. (Default is 11).

Command with Response Examples

AT+TXP=11

OK

AT+TXP?

11

OK

AT+RXD Receive Delay

Allows the dot to use non-default rx windows, if required by the network it is attempting to communicate with. Opens receive window to listen for a response when sending packets with one of the +SEND commands.

Note: Setting must match that of network server, in case of OTA join the value sent in Join Accept message overwrites this setting.

Syntax

Command
AT+RXD=<parameter1>
AT+RXD?

Parameters and Values

Parameter1

1-15 seconds (Default)

Command with Response Examples

```
AT+RXD=1
```

```
OK
```

```
AT+RXD?
```

```
1
```

```
OK
```

AT+CRC Cyclical Redundancy Check

Enable or disable Cyclical Redundancy Check(CRC) for uplink and downlink packets. Must be enabled to be compliant with LoRaWAN. Packets received with a bad CRC are discarded.

Syntax

Command
AT+CRC=<parameter1>
AT+CRC?

Parameters and Values

Parameter1

0 CRC disabled

1 CRC enabled (Default)

Command with Response Examples

```
AT+CRC=1
```

```
OK
```

```
AT+CRC?
```

```
1
```

```
OK
```

AT+ADR Adaptive Data Rate

Enable or disable adaptive data rate for your device. Allows for intelligent link optimization. After the network server has received several uplinks, it calculates the available link budget based on the signal strength and quality of those uplinks. If it determines that a higher data rate can be used, it will send a link ADR request to increase the data rate. In case of poor signal, Parameter2 and Parameter3 are used to determine how aggressively to reduce the data rate. The AckLimit is the number of uplinks sent before the ADRACKReq bit is set requesting a downlink response. If the response does not come within the number of uplinks set by the AckDelay parameter, the data rate is reduced one step. If +ACK is enabled and a particular packet is retransmitted, ADR only counts it as one packet.

Starting in version 4.2.0: (Optional) Parameter4 enables or disables data rate auto increment based on the requested payload size. If the payload provided to AT+SEND exceeds the allowed maximum payload of the current data rate, the data rate increases to send the packet without error.

Syntax

Command
AT+ADR=<parameter1>,<parameter2>,<parameter3>,<parameter4>
AT+ADR?

Parameters and Values

Parameter1	ADR Enable/Disable
0	ADR disabled
1	ADR enabled (Default)
Parameter2	AckDelay (Optional)
1-127	Range
Parameter3	AckLimit (Optional)
1-127	Range
Parameter 4	AutoIncrementDR (Optional). To set data rate auto increment, you must provide AckDelay and AckLimit.
0	Disabled
1	Enabled. (Default)

Command with Response Examples

AT+ADR=0

OK

AT+ADR?

0

OK

Auto Increment DR

AT&F

OK

AT+ADR

1, 32, 64, 1

OK

AT+ADR=1, 32, 64, 0

OK

AT+ADR

1, 32, 64, 0

OK

AT+TXDR TX Data Rate

Sets the current data rate to use, DR0-DR15 or 0-15 depending on channel plan.

If ADR is enabled, this might not be the data rate of the current session. When ADR is enabled, use the +SDR command to query the data rate of the current session.

Note: Data rate is directly related to spreading factor. Spreading factor determines the amount of redundant data spread across the transmission. A higher spreading factor means more redundant data is transmitted, which results in a longer range but a lower data rate.

US 915 Data Rates Max Payload (bytes)

DR0 : 11
DR1 : 53
DR2 : 125
DR3 : 242
DR4 : 242

EU 868 Data Rates Max Payload (bytes)

DR0 : 51
DR1 : 51
DR2 : 51
DR3 : 115
DR4 : 242
DR5 : 242
DR6 : 242
DR7 : 242

AU 915 Data Rates Max Payload (bytes)

DR0 : 51
DR1 : 51
DR2 : 51
DR3 : 115
DR4 : 242
DR5 : 242
DR6 : 242

KR 920 Data Rates Max Payload (bytes)

DR0 : 51
DR1 : 51
DR2 : 51
DR3 : 115
DR4 : 242
DR5 : 242

IN 865 Data Rates Max Payload (bytes)

DR0 : 51
DR1 : 51
DR2 : 51
DR3 : 115

DR4 : 242
 DR5 : 242
 DR7 : 242

Note: There is no DR6 for India.

AS 923 Data Rates Max Payload (bytes)

	No Dwell	Dwell
DR0 :	51	N/A
DR1 :	51	N/A
DR2 :	51	11
DR3 :	115	53
DR4 :	242	125
DR5 :	242	242
DR6 :	242	242
DR7 :	242	242

Syntax

Command
AT+TXDR=<parameter1>
AT+TXDR?

Command with Response Examples

AT+TXDR=3

OK

AT+TXDR?

DR3 - SF7BW125

OK

AT+TXDR=DR1

OK

AT+TXDR?

DR1 - SF9BW125

OK

AT+SDR Session Data Rate

Display the data rate of the current session . It can be changed by the network server if ADR is enabled.

Syntax

Command
AT+SDR
AT+SDR?

Parameters and Values

None

Command with Response Examples

```
AT+SDR
DR0 - SF10BW125
```

OK

```
AT+SDR?
DR0 - SF10BW125
```

OK

AT+REP Repeat Packet

Repeats each frame as many times as indicated or until downlink from network server is received. This setting increases redundancy to increase change of packet to be received by the gateway at the expense of increasing network congestion. When enabled, debug output shows multiple packets being sent. On the Conduit, an MQTT client can listen to the 'packet_recv' topic to see that duplicate packets are received, but not forwarded to the up topic.

Syntax

Command
AT+REP=<parameter1>
AT+REP?

Parameters and Values

Parameter1

0-15 Number of send attempts. (Default)

Command with Response Examples

```
AT+REP
0
```

OK

```
AT+REP?
0
```

OK

Sending Packets

AT+SEND Send

Sends supplied data and opens a receive window, in class A mode, to receive data from the gateway/network server. If a data packet is received, it is output following AT+SEND. To configure the receive data format, use the AT+RXO command. Although parameter1 can be up to 242 bytes, it is limited by the session data rate and any MAC commands that are scheduled to be sent. Use +TXS to determine the available payload. Sending an empty payload will clear the MAC commands.

US 915 MHz Device		EU 868MHz Device	
DR0-DR4	Payload Size	DR0-DR7	Payload
DR0	11	DR0	51
DR1	53	DR1	51
DR2	129	DR2	51
DR3	242	DR3	115
DR4	242	DR4	242
		DR5	242
		DR6	242
		DR7	50

+SEND commands response is significantly impacted by the AT+ACK setting. The following table shows the theoretical worst case timing from +SEND to OK or ERROR response using a 915Mhz device. Retransmit delay is random 1-3s delay before a retransmit if an ACK has not been received. Time on air is the amount of time consumed transmitting. Wait for receive is the max time waiting to receive a data packet from the gateway/network server.

Note: These are theoretical values. With no response from the network server, the +ACK=0 time has been observed at about 2.5 seconds.

+ACK	Cumulative Retransmit Delay	Cumulative Time on Air (seconds)	Cumulative Wait for Receive (seconds)	Max Response Time (seconds)
0	0	.4	1-2	2.4
1	0	.4	3-4	4.4
2	1-3	.8	5-6	9.8
3	2-6	1.2	7-8	15.2
4	3-9	1.6	9-10	20.6
5	4-12	2	11-12	26
6	5-15	2.4	13-14	31.1
7	6-18	2.8	15-16	36.8
8	7-21	3.2	17-18	42.2

Syntax

Command

```
AT+SEND=<parameter1>
```

Parameters and Values

Parameter1

Up to 242 bytes of data or the maximum payload size based on spreading factor (See AT+TXDR)

Command with Response Examples

```
AT+SEND=<data to send>
```

```
<data received from the gateway/network server>
```

```
OK
```

```
AT+SEND <data to send> (the "=" sign is optional)
<data received from the gateway/network server>
```

```
OK
```

```
AT+SEND=This is a test with SF10
Data exceeds datarate max payload
```

```
ERROR
```

```
AT+SEND (sends an empty packet and opens a receive window)
<data received from the gateway/network server>
```

```
OK
```

```
AT+SEND
Network Not Joined
```

```
ERROR
```

AT+SENDB Send Binary

Functions as the +SEND command, but sends hexadecimal data.

Syntax

Command

```
AT+SENDB=<parameter1>
```

Parameters and Values

Parameter1

String of up to 242 eight bit hexadecimal values. Each value may range from 00 to FF.

Command with Response Examples

```
AT+SENDB=6174 (sends the letter a and t)
<data received from the gateway/network server>
```

```
OK
```

Receiving Packets

AT+RECV Receive Once

Displays the last payload received. It does not initiate reception of new data. Use +SEND to initiate receiving data from the network server in class A mode. Rx Packet pin is brought high when packet is received. When you issue a new command, the pin is reset (mDot:D12, xDot:GPIO1). AT+RECV retrieves the packet and resets the pin.

Syntax

Command

AT+RECV

Parameters and Values

None

Command with Response Examples

```
AT+RECV
<last received data payload>
```

OK

Pin Output

Rx Packet pin is brought high when packet is received. When you issue a new command, the pin is reset (mDot:D12, xDot:GPIO1). AT+RECV retrieves the packet and resets the pin.

AT+RXO Receive Output

Formats the receive data output. Data is processed into hexadecimal data, left unprocessed/raw, in serial data mode, or extended hexadecimal format.

- Hexadecimal outputs the byte values in the response.
- Raw/Unprocessed outputs the actual bytes on the serial interface.
- Serial outputs:

Downlink:	Ack Requested :	1 byte : 0 true 1 false
	Rx Address :	4 bytes:
	LSB Frame Count :	4 bytes : LSB
	Rx Port :	1 Byte
	Payload:	N Bytes
Uplink:	Port :	1 Byte
	ACK or Repeat :	1 Byte : 0 = ACK, 1 = Repeat
	# of Acks/Reps :	1 Byte-0 - 8
	Payload :	N Bytes

Syntax**Command**

AT+RXO=<parameter1>

AT+RXO?

Parameters and Values

Parameter1

- | | |
|---|--|
| 0 | Hexadecimal (Default) |
| 1 | Raw/Unprocessed |
| 2 | Used to send payloads in serial data mode. |

3 Extended Hexadecimal format

Command with Response Examples

```
AT+RXO=0
```

```
OK
```

```
AT+RXO?
```

```
0
```

```
OK
```

AT+DP Data Pending

Set to indicate that a reason exists to send an uplink.

1. There are downlinks pending for this device.
2. There are MAC command answers pending on this device.
3. An acknowledgement has been requested by the network server.

Syntax

Command
AT+DP
AT+DP?

Parameters and Values

None

Command with Response Examples

```
AT+DP
```

```
0
```

```
OK
```

```
AT+DP?
```

```
0
```

```
OK
```

AT+TXW Transmit Wait

Enables or disables waiting for RX windows to expire after sending.

Note: Non-blocking operation may disrupt the Dot's ability to receive downlink packets.

Syntax

Command
AT+TXW=<parameter1>
AT+TXW?

Parameters and Values

Parameter1

- 0 Do not wait. Not recommended.
- 1 Wait (Default)

Command with Response Examples

```
AT+TXW=1
```

```
OK
```

```
AT+TXW?
```

```
1
```

```
OK
```

AT+MCRX Multicast Rx parameters

Query or set the multicast receive (Rx) parameters which include index, datarate, frequency, and period. For period, if you set the value to -1 then Class C is configured. For all other values (1-8), Class B is set. **Note:** Multicast session is part of the session. Use save, AT+SS, and restore, AT+RS.

Syntax**Command**

```
AT+MCRX=<parameter1>,<parameter2>,<parameter3>,<parameter4>
```

```
AT+MCRX=<parameter1>
```

Parameters and Values

Parameter1

1- 8 (index)

Parameter2

DR0 - DR15 (datarate)

Parameter3

UINT (frequency)

Parameter4

-1 - 7 (1-7: period, -1: Class C)

Command with Response Examples

```
AT+MCRX=1,2,923300000,1
```

```
Set Multicast Rx Settings: 1,2,923300000,1
```

```
OK
```

```
AT+MCRX=1
DR2,923300000,1
```

OK

Statistics

AT+RSSI Signal Strength

Displays signal strength information for all packets received from the gateway since the last reset. There are four signal strength values, which, in order, are: last packet RSSI, minimum RSSI, maximum RSSI and average RSSI. Values range from -140dB to 0dB.

Syntax

Command
AT+RSSI
AT+RSSI?

Parameters and Values

None

Command with Response Examples

```
AT+RSSI
-54, -54, -50, -52
```

OK

```
AT+RSSI?
0, 0, 0, 0
```

OK

AT+LBTRSSI Listen Before Talk Signal Strength

Read the LBTRSSI.

Syntax

Command
AT+LBTRSSI
AT+LBTRSSI?

Parameters and Values

None

Command with Response Examples

```
AT+LBTRSSI
-54, -54, -50, -52
```

OK

AT+LBTRSSI?

0, 0, 0, 0

OK

AT+SNR **Signal to Noise Ratio**

Displays signal to noise ratio for all packets received from the gateway since the last reset. There are four signal to noise ratio values, which, in order, are: last packet SNR, minimum SNR, maximum SNR and average SNR. Values range from -20dBm to 20dBm.

Syntax

Command
AT+SNR
AT+SNR?

Parameters and Values

None

Command with Response Examples

AT+SNR

2.9, 2.8, 3.0, 2.9

OK

AT+SNR?

2.9, 2.8, 3.0, 2.9

OK

AT+TXS **Available Payload**

Get available transmit payload size. Payload size is limited by the data rate and any pending MAC commands. Sending with an empty payload will send pending MAC commands freeing up payload space.

Syntax

Command
AT+TXS?

Parameters and Values

Value1

Available Payload 0-242

Command with Response Examples

AT+TXS?

11

OK

Serial Data Mode

AT+SD Serial Data Mode

Reads serial data and sends packets, received packets are output to serial. See AT+RXO for serial output display options.

- Send +++ to escape serial data mode and enter AT command mode. There are one second guard times for +++. After sending data and before entering +++, you must wait one second. After entering +++ and before sending other data, you must also wait one second.
- When +++ is received to escape serial data mode all buffer data will be discarded.
- CTS is handled by the serial driver and is relative to its buffer size. When flow control is enabled, see AT&K.
- If an RX packet requires an ACK or data pending bit is set, an empty packet is sent automatically.

Syntax

Command
AT+SD

Parameters and Values

None

Command with Response Examples

AT+SD

CONNECT

<send data>

<send +++ to escape>

OK

AT+SMODE Startup Mode

Configures which operation mode the end device powers up in, either AT command mode or serial data mode.

- **AT Command mode:** The end device powers up or resets in command mode. AT commands are used to send and receive data.
- **Serial data mode:** Allows the end device to send and receive data without entering AT commands. Data is sent and received based on wake command settings. Upon waking, GPIO2 is raised indicating it is ready to receive data. When data input stops and the wake timeout is met, the device goes to sleep and the GPIO goes low.
- This mode requires network join mode to be set for either auto join or peer-to-peer mode. (AT+NJM=2 or 3).

Note: To exit serial data mode, reset the end device and input+++ within one second. If the end device responds to AT commands, the +++ was successful. After exiting data mode issue AT+SMODE=0 to disable data mode and AT&W to save the change.

Syntax

Command
AT+SMODE=<parameter1>

AT+SMODE?

Parameters and Values

Parameter1

0 AT command mode (Default)

1 Serial data mode

Command with Response Examples

AT+SMODE=0

OK

AT+SMODE?

0

OK

AT+SDCE Serial Data Clear on Error

Sets the device to either keep or discard data in the serial buffer when an error occurs.

In serial data mode, the dot wakes periodically to received data on the serial pins and transmit out the radio. If the data cannot be sent, this setting indicates the how device handles the buffered data. Data can either be kept in the buffer to be resent until successful or be discarded.

Syntax

Command
AT+SDCE=<parameter1>
AT+SDCE?

Parameters and Values

Parameter1

0 Data that cannot be sent remains in the serial buffer for later transmission

1 Data that cannot be sent is discarded

Command with Response Examples

AT+SDCE

1

OK

AT+SDCE?

1

OK

Chapter 5 – Power Management

AT+SLEEP Sleep Mode

Puts the end device in sleep mode. The end device wakes on interrupt, interval or both based on AT+WM setting. Once awakened, use AT+SLEEP again to return to sleep mode.

Starting in version 4.2.0: Automatic Session Save Over Sleep When using AT+SLEEP=0, the session is saved automatically when AT+SLEEP=0 is called and restored when the device wakes from sleep. You no longer need to call AT+SS before and AT+RS after AT+SLEEP

Note: Deep sleep is not available for mDot devices.

Deep Sleep (On xDot: ST Micro standby mode. On xDot Essential or xDot Advanced: MAX32670 backup mode) is the lowest power mode. All RAM is lost and peripherals are off. You can use backup registers to retain the state over sleep. The dot library keeps the running state in the backup registers to be reloaded automatically to maintain the session. Execution begins at the start of the program as it would from power up.

Sleep (On xDot: ST Micro stop mode. On xDot Essential or xDot Advanced: MAX32670 deep sleep mode) maintains RAM and keeps peripherals on. Execution resumes from the call to sleep.

For xDot Essential and Advanced, sleeping with wake on interrupt only configured draws less power than with wake from interval as the RTC domain is powered down.

If you need to wake the device at a specific 1 msec timing, take the following values into account.

- Waking from Deep Sleep takes 314-407 usec
- Waking from Sleep takes 13-14 usec
- RTC period is 30.5 usec

Syntax

Command

```
AT+SLEEP=<parameter1>
```

Parameters and Values

Parameter1

- | | |
|---|------------|
| 0 | Deep sleep |
| 1 | Sleep |

Command with Response Examples

```
AT+SLEEP
```

```
AT+SLEEP=0
```

```
AT+SLEEP=1
```

```
AT+JOIN
```

```
OK
```

```
AT+SEND=DATA
```

```

OK
AT+SLEEP=0

OK
AT+NJS
1

OK
AT+SEND=DATA

OK

```

AT+WP Wake Pin

Sets the pin that the dot monitors to wake from interrupt. Parameter2 configures an internal pull resistor option. Parameter3 configures the edge to trigger on.

Syntax

Command
AT+WP=<parameter1>, <parameter2>, <parameter3>
AT+WP?

Parameters and Values

xDot

Parameter1 (Pin)

1	UART1_RX
2	GPIO0
3	GPIO1
4	GPIO2
5	GPIO3
6	WAKE

Parameter2 (mode)

0	NOPULL
1	PULLUP
2	PULLDOWN

Parameter3 (trigger)

0	ANY
1	RISE
2	FALL

Command with Response Examples

```
AT+WP=6, 2, 1
```

```
OK AT+WP?
WAKE, PULLDOWN, RISE
OK
```

AT+WM Wake Mode

Configures the end device to wake from sleep mode either on a time interval, by an interrupt or both. For details on interval mode, refer to +WI. For details on interrupt mode, refer to +WP. (NOTE: +RTC time will not increment during sleep)

Syntax

Command
AT+WM=<parameter1>
AT+WM?

Parameters and Values

Parameter1

- 0 Wake on interval. (Default)
- 1 Wake on interrupt
- 2 Wake on interval or interrupt

Command with Response Examples

```
AT+WM=0
```

```
OK
```

```
AT+WM?
```

```
0
```

```
OK
```

AT+WI Wake Interval

When using wake mode set to 'interval' or 'interval or interrupt', use this command to configure the number of seconds the end device sleeps.

Syntax

Command
AT+WI=<parameter1>

AT+WI?

Parameters and Values

Parameter1

2-2147483647 seconds (Default is 10)

Command with Response Examples

AT+WI=10

OK

AT+WI?

10

OK

AT+WD Wake Delay

This is used only when +SMODE =1.

Configures the maximum amount of time to wait for data when the device wakes up from sleep mode. If this timer expires, the device goes back to sleep. If the device received at least one character before this timer expires, the device continues to read input until either the payload is reached or the +WTO timer expires at which time it sends the collected data and goes to sleep.

Syntax

Command
AT+WD=<parameter1>
AT+WD?

Parameters and Values

Parameter1

2-2147483647 milliseconds (Default is 100)

Command with Response Examples

AT+WD=100

OK

AT+WD?

100

OK

AT+WTO Wake Timeout

This is used only when +SMODE =1.

Configures the amount of time that the device waits for subsequent characters following the first character

received upon waking. Once this timer expires, the collected data is sent and the end device goes back to sleep.

Syntax

Command
AT+WTO=<parameter1>
AT+WTO?

Parameters and Values

Parameter1

0-65000 milliseconds (Default is 20)

Command with Response Examples

```
AT+WTO=20
```

```
OK
```

```
AT+WTO?
```

```
20
```

```
OK
```

AT+ANT Antenna Gain

Allows a non-default antenna to be used while still adhering to transmit power regulations.

Syntax

Command
AT+ANT=<parameter1>
AT+ANT?

Parameters and Values

Parameter1

-128 to 127 dBi (Default is 3)

Command with Response Examples

```
AT+ANT=3
```

```
OK
```

```
AT+ANT?
```

```
3
```

```
OK
```

Chapter 6 – Testing and Compliance

AT+RXDR Receive Data Rate

Sets the receive data rate. Used to configure the receive data rate that AT+RECV uses for receiving packets.

Note: This command is used for compliance testing. It is not intended for the typical end user.

Syntax

Command
AT+RXDR=<parameter1>
AT+RXDR?

Parameters and Values

Parameter1

7-10 915MHz model (Default is 9)

7-12 868MHz model

Command with Response Examples

```
AT+RXDR=9
```

```
OK
```

```
AT+RXDR?
```

```
SF_9
```

```
OK
```

EU 868MHz

```
AT+RXDR?
```

```
SF_12
```

AT+RXF Receive Frequency

Deprecated

Note: Beginning in firmware version 3.2, this command has been removed from production firmware. It will remain available in debug firmware.

Configures the frequency that +RECV listens to for received packets.

Note: This command is used for compliance testing. It is not intended for the typical end user.

Syntax

Command
AT+RXF=<parameter1>
AT+RXF?

Parameters and Values

Parameter1

0

902000000-928000000 (Default is 903700000)

Command with Response Examples

```
AT+RXF=902123456
```

OK

```
AT+RXF?
902123456
```

OK

AT+RECV **Receive Continuously**

Deprecated

Note: Beginning in firmware version 3.2, this command has been removed from production firmware. It will remain available in debug firmware.

Causes the device to receive packets continuously on the frequency configured via AT+RXF and at the data rate configured via AT+RXDR. Use +++ to exit this mode. It can take many seconds to get an OK following +++.

Note: This command is used for compliance testing. It is not intended for the typical end user.

Syntax

Command
AT+RECV
AT+RECV?

Parameters and Values

None

Command with Response Examples

```
AT+RECV
```

OK

AT+SENDC **Send Continuous Wave**

Used for testing. Sends un-modulated data continuous wave transmission.

Syntax

Command
AT+SENDC=<parameter1>,<parameter2>,<parameter3>

Parameters and Values

Parameters

<parameter1> Timeout

<parameter2> Frequency

<parameter3> Power

Command with Response Examples

Command to send for 10s at 923.3 MHz and 20 dBm

```
AT+SENDC=10000,923300000,20
```

OK

AT+SENDI Send on Interval

Functions the same as the +SEND command, except that it takes an additional parameter as the interval then continually sends and receives on that interval. Issue +++ to stop sending.

Note: This command is used for compliance testing. It is not intended for the typical end user.

Syntax

Command

```
AT+SENDI=<parameter1>, <parameter2>
```

Parameters and Values

Parameter1

100-2147483647 milliseconds

Parameter2

Up to 242 bytes of data or the max payload size based on the spreading factor (see AT+TXDR)

Command with Response Examples

```
AT+SENDI=1000,<data to send>
```

```
<data received from the gateway/network server>
```

OK

```
AT+SENDI
```

```
Invalid arguments
```

```
ERROR
```

AT+TXF Transmit Frequency

Set Tx frequency used in Peer-to-Peer mode. To avoid interference with LoRaWAN networks, use 915.5-919.7 MHz for US915 devices and a fixed 869.85 MHz for EU868 devices.

Note: The parameter ranges below are used for compliance testing and are not intended for the typical end user.

Syntax

Command`AT+TXF=<parameter1>``AT+TXF?`**Parameters and Values**

Parameter1

US915 - (0,902000000-928000000)

EU868 - (0,863000000-870000000)

Command with Response Examples`AT+TXF=902123456`

OK

Chapter 7 – Examples

Network Configuration and Joining

Configure Network ID and Network Key with either a hexadecimal value or name/passphrase.

- To configure with a hexadecimal value, provide a first argument of 0:

```
AT+NI=0,0011223344556677
```

```
OK
```

```
AT+NK=0,00112233445566770011223344556677
```

```
OK
```

- To configure with a name/passphrase value provide a first argument of 1:

```
AT+NI=1,MTS-LORA-1
```

```
OK
```

```
AT+NK=1,MTS-LORA-PASSPHRASE
```

```
OK
```

US 915MHz - Frequency Sub-band

Before joining to a Conduit in the US, set the frequency sub-band to join using the frequencies the Conduit is configured to listen on.

To configure the frequency sub-band:

```
AT+FSB=5
```

```
OK
```

Join Mode

The Dot supports both OTA and manual provisioning or joining. See *OTA Activation* in *Chapter 3 Network Management*.

- To configure for OTA join mode and connect to the network:

```
AT+NJM=1
```

```
OK
```

```
AT+JOIN
```

```
OK
```

- To configure for AUTO OTA join mode and connect to the network, if you are not already joined, a join attempt will be made:

```
AT+NJM=2
```

```
OK
```

```
Joining Network... Network Joined
```

```
OK
```

- To configure for MANUAL provisioning, change the mode, then set the network address and session keys:

```
AT+NJM=0
```

```
OK
```

```
AT+NA=0011223344556677
```

```
OK
```

```
AT+DSK=00112233445566770011223344556677
```

```
OK
```

```
AT+NSK=00112233445566770011223344556677
```

```
OK
```

Ensuring Network Connectivity

To ensure the Dot is still connected to the network, request a response from the server. One method is to require ACKs for each packet, but under a heavy load, the server may not be able to respond to every packet. The other option is to periodically require an ACK using AT+LCC, this maintains join status without overburdening the network server. In the following examples, the gateway is powered off to simulate network loss. Refer to *Ensuring Network Connectivity* in *Chapter 3 Network Management*.

- Using acknowledgments to detect network loss requires a response for each packet. With a threshold set to one, the network is no longer joined after only one lost packet. Increasing the LCT value allows some missed packets without the need to rejoin the network. If AUTO_OTA is enabled the device automatically attempts to rejoin after network is lost.

```
[Gateway Powered On]
AT+JOIN
Successfully joined network
```

```
OK
```

```
AT+ACK=1
```

```
OK
```

```
AT+LCT=1
```

```
OK
```

```
AT+SEND=message
```

```
OK
```

```
[Gateway Powered Off]
```

```

AT+NJS
1

OK
AT+SEND=message
Operation Timed Out - ACK not received

OK
AT+NJS
0

OK

```

- When using link checks to detect network loss, you can configure how many responses are required. With a threshold set to one, the network is no longer joined after only one lost packet. Increasing the LCT value allows some missed packets without the need to rejoin the network. If AUTO_OTA is enabled the device automatically attempts to rejoin after network is lost.

```

[Gateway Powered On]

AT+JOIN
Successfully joined network

OK
AT+LCC=2

OK
AT+LCT=1

OK
AT+SEND=message

OK
[Gateway Powered Off]
AT+SEND=message

OK
AT+NJS
1

OK
AT+SEND=message
Network Not Joined

ERROR
AT+NJS

0

OK

```

Serial Mode

Configure the device to wake periodically or on interrupt, wait for data on serial port, send data out, and go back

to sleep. Refer to *Chapter 5, Power Management* for more information.

Configure the device to wake up after 10 seconds of sleep and send data from the serial port:

```
AT+WM=0

OK
AT+WI=10

OK
AT+WD=100

OK
AT+WTO=20

OK
AT+SMODE=1

OK
AT&W

OK
ATZ

OK
```

Device resets into Serial Mode.

Peer to Peer

mDots using 1.0.8 AT Firmware or Library can be configured for Peer to Peer communication. To allow communication between mDots, configure two or more mDots with the same network settings. Enabling ACKs guarantees packet delivery; however, this may disrupt higher level protocols such as zmodem or ymodem file transfers. Communication between mDots is half-duplex, so both ends should not transmit at the same time or communication will be disrupted.

The frequency can be set for US 915 models. We advise using 915.5-919.7 to avoid interference with LoRa Networks.

For Europe 868 models, use a fixed frequency, 869.85, with 7 dBm power setting to allow 100% duty-cycle usage.


Configuration

This example sets up each side with identical settings and starts serial data mode. Then, text can be entered into a terminal on either side and it will show as received on the other mDot.


```
AT+NJM=3
AT+NA=00112233
AT+NSK=00112233001122330011223300112233
AT+DSK=33221100332211003322110033221100
AT+TXDR=DR8 (US:DR8-DR13,EU:DR0-DR6)
AT+TXF=915500000 (US-ONLY:915.5-919.7)
AT+RXO=1
AT&W
ATZ
AT+SD
```

Peer-to-Peer Throughput


US915 Datarate - Time On Air

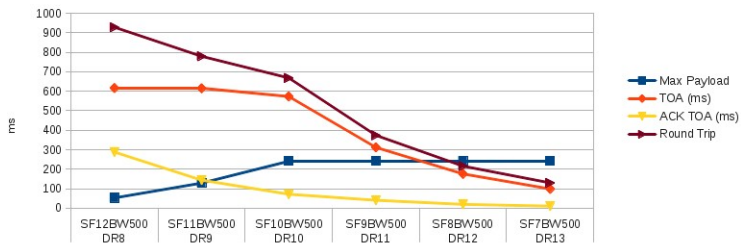

EU868 Datarates - Time On Air

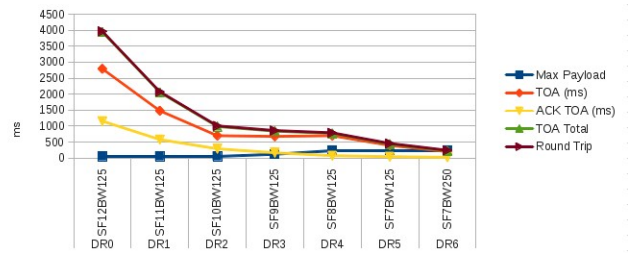

US915 Datarates - Throughput

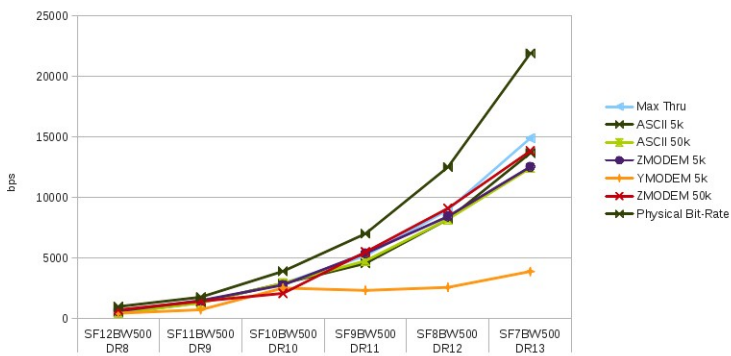

EU868 Datarates - Throughput

